





**DTX**  
drums

ELECTRONIC DRUM PAD  
PAD DE BATTERIE ÉLECTRONIQUE  
PAD DE BATERIA ELECTRONICA  
电鼓打击板  
電子ドラムパッド

**KP128**

**Owner's Manual**  
**Benutzerhandbuch**  
**Mode d'emploi**  
**Manual do Proprietário**  
**使用说明书**  
**取扱説明書**

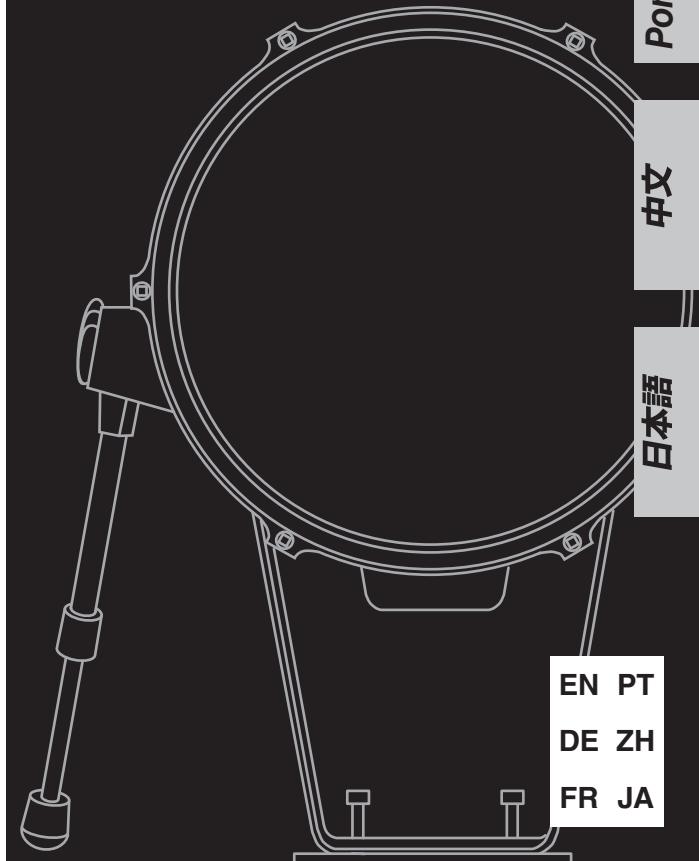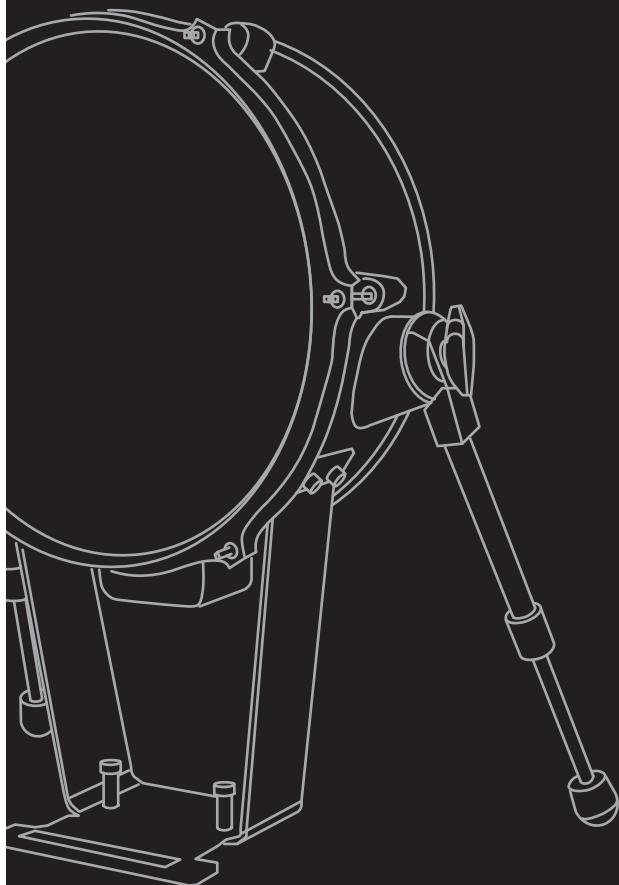

EN PT  
DE ZH  
FR JA

English

Deutsch

Français

Português

中文

日本語

The model number, serial number, power requirements, etc., may be found on or near the name plate on the side of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

**Model No.**

**Serial No.**

(side\_en)

Die Nummer des Modells, die Seriennummer, der Leistungsbedarf usw. sind auf dem Typenschild, das sich seitlich am Gerät befindet, oder in der Nähe davon angegeben. Sie sollten diese Seriennummer an der unten vorgesehenen Stelle eintragen und dieses Handbuch als dauerhaften Beleg für Ihren Kauf aufbewahren, um im Fall eines Diebstahls die Identifikation zu erleichtern.

**Modell Nr.**

**Seriennr.**

(side\_de)

Le numéro de modèle, le numéro de série, l'alimentation requise, etc., se trouvent sur ou près de la plaque signalétique du produit, située sur le côté de l'unité. Notez le numéro de série dans l'espace fourni ci-dessous et conservez ce manuel en tant que preuve permanente de votre achat afin de faciliter l'identification du produit en cas de vol.

**N° de modèle**

**N° de série**

(side\_fr)

O número de modelo, número de série, requisitos de energia, etc. podem ser encontrados na placa de nome, que está ao lado da unidade. Anote-o no espaço reservado abaixo e guarde este manual como registro de compra permanente para auxiliar na identificação do produto em caso de roubo.

**Nº do modelo**

**Nº de série**

(side\_pt)

本产品的型号、序列号、电源要求等规格可能标在铭牌上或铭牌附近，铭牌位于本机侧面。请将该序列号填写到下方的横线上，并妥善保存本说明书，以便在产品被盗时作为永久购买凭证使用。

**型号名称**

**序列号**

(side\_zh)

機種名(品番)、製造番号(シリアルナンバー)、電源条件などの情報は、製品の側面にある銘板または銘板付近に表示されています。製品を紛失した場合などでもご自身のものを特定していただけるよう、機種名と製造番号については以下の欄にご記入のうえ、大切に保管していただくことをお勧めします。

**機種名**

**製造番号**

(side\_ja)

### Information for users on collection and disposal of old equipment:



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation.

By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

#### For business users in the European Union:

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

#### Information on Disposal in other Countries outside the European Union:

This symbol is only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

(weee\_eu\_en\_02)

### Verbraucherinformation zur Sammlung und Entsorgung alter Elektrogeräte



Befindet sich dieses Symbol auf den Produkten, der Verpackung und/oder beiliegenden Unterlagen, so sollten benutzte elektrische Geräte nicht mit dem normalen Haushaltsabfall entsorgt werden.

In Übereinstimmung mit Ihren nationalen Bestimmungen bringen Sie alte Geräte bitte zur fachgerechten Entsorgung, Wiederaufbereitung und Wiederverwendung zu den entsprechenden Sammelstellen.

Durch die fachgerechte Entsorgung der Elektrogeräte helfen Sie, wertvolle Ressourcen zu schützen, und verhindern mögliche negative Auswirkungen auf die menschliche Gesundheit und die Umwelt, die andernfalls durch unsachgerechte Müllentsorgung auftreten könnten.

Für weitere Informationen zum Sammeln und Wiederaufbereiten alter Elektrogeräte kontaktieren Sie bitte Ihre örtliche Stadt- oder Gemeindeverwaltung, Ihren Abfallentsorgungsdienst oder die Verkaufsstelle der Artikel.

#### Information für geschäftliche Anwender in der Europäischen Union:

Wenn Sie Elektrogeräte ausrangieren möchten, kontaktieren Sie bitte Ihren Händler oder Zulieferer für weitere Informationen.

#### Entsorgungsinformation für Länder außerhalb der Europäischen Union:

Dieses Symbol gilt nur innerhalb der Europäischen Union. Wenn Sie solche Artikel ausrangieren möchten, kontaktieren Sie bitte Ihre örtlichen Behörden oder Ihren Händler und fragen Sie nach der sachgerechten Entsorgungsmethode.

(weee\_eu\_de\_02)

### Informations concernant la collecte et le traitement des déchets d'équipements électriques et électroniques



Le symbole sur les produits, l'emballage et/ou les documents joints signifie que les produits électriques ou électroniques usagés ne doivent pas être mélangés avec les déchets domestiques habituels.

Pour un traitement, une récupération et un recyclage appropriés des déchets d'équipements électriques et électroniques, veuillez les déposer aux points de collecte prévus à cet effet, conformément à la réglementation nationale.

En vous débarrassant correctement des déchets d'équipements électriques et électroniques, vous contribuez à la sauvegarde de précieuses ressources et à la prévention de potentiels effets négatifs sur la santé humaine qui pourraient advenir lors d'un traitement inapproprié des déchets.

Pour plus d'informations à propos de la collecte et du recyclage des déchets d'équipements électriques et électroniques, veuillez contacter votre municipalité, votre service de traitement des déchets ou le point de vente où vous avez acheté les produits.

#### Pour les professionnels dans l'Union européenne :

Si vous souhaitez vous débarrasser des déchets d'équipements électriques et électroniques, veuillez contacter votre vendeur ou fournisseur pour plus d'informations.

#### Informations sur la mise au rebut dans d'autres pays en dehors de l'Union européenne :

Ce symbole est seulement valable dans l'Union européenne. Si vous souhaitez vous débarrasser de déchets d'équipements électriques et électroniques, veuillez contacter les autorités locales ou votre fournisseur et demander la méthode de traitement appropriée.

(weee\_eu\_fr\_02)

### Informações para os utilizadores relativas à recolha e eliminação de equipamentos usados



Este símbolo, presente em produtos, embalagens e/ou incluído na documentação associada, indica que os produtos elétricos e eletrónicos usados não devem ser eliminados juntamente com os resíduos domésticos em geral.

O procedimento correto consiste no tratamento, recuperação e reciclagem de produtos usados, pelo que deve proceder à respetiva entrega nos pontos de recolha adequados, em conformidade com a legislação nacional em vigor.

A eliminação destes produtos de forma adequada permite poupar recursos valiosos e evitar potenciais efeitos prejudiciais para a saúde pública e para o ambiente, associados ao processamento incorreto dos resíduos.

Para mais informações relativas à recolha e reciclagem de produtos usados, contacte as autoridades locais, o serviço de eliminação de resíduos ou o ponto de venda onde foram adquiridos os itens relevantes.

#### Informações para utilizadores empresariais na União Europeia:

Para proceder à eliminação de equipamento elétrico e eletrónico, contacte o seu revendedor ou fornecedor para obter informações adicionais.

#### Informações relativas à eliminação em países não pertencentes à União Europeia:

Este símbolo é válido exclusivamente na União Europeia. Caso pretenda eliminar este tipo de itens, contacte as autoridades locais ou o seu revendedor e informe-se acerca do procedimento correto para proceder à respetiva eliminação.

(weee\_eu\_pt\_02a)

## PRECAUTIONS Please read carefully before Proceeding.

The purpose of the precautions detailed below is to ensure that this product is used safely without fear either of accidental injury to you or other people or of damage to property. As a means, furthermore, of indicating the severity and immediacy of any risk of injury or damage associated with incorrect operation, these precautions are classified as either WARNING or CAUTION. The instructions presented together with precautions are extremely important in terms of ensuring safety, and therefore, they should be fully observed.

\*: After reading this Owner's Manual, ensure that it is kept in a safe, convenient location for future reference.



### **WARNING**

**Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from fire or other hazards. These precautions include, but are not limited to, the following:**

- Do not put burning items, such as candles, near the unit. A burning item may fall over and cause a fire.



### **CAUTION**

**Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others. These precautions include, but are not limited to, the following:**

- Assemble this product in the proper sequence by following the assembly instructions in this manual. Also, make sure to tighten the bolts regularly. Failure to do so might result in damage to the product or even injury.
- When assembling this product (i.e., when connecting the base or a foot pedal to the body), take care to avoid squeezing, crushing, or otherwise injuring fingers, feet, and other body parts.
- The stoppers at the tip of the legs, anti-slip stoppers on kick pads and on foot pedals have sharp tips. In order to avoid injury, therefore, you should take special care whenever handling these components.
- Do not place the product in an unstable position where it might accidentally fall over.
- Be sure to securely tighten bolts and other fasteners when setting up this product. In addition, be sure to proceed slowly when loosening bolts. If this precaution is not observed, the product can fall or topple over, resulting in injury or equipment damage.
- Whenever setting up this product, ensure that cables and the like are arranged safely. If anyone were to trip on a cable, the product could topple over and cause injury.
- Do not alter the product. Doing so can result in injury or damage/deterioration to the product.
- Do not rest your weight on, or place heavy objects on the product, and do not use excessive force on the knob, jack or connector.
- Keep small parts out of the reach of infants. Your children may accidentally swallow them.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the product.

### **NOTICE**

- Do not expose the product to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. Doing so can result in possibility cause malfunction or damage to the product.
- Do not use or keep the product in places with extremely high temperature (places in direct sunlight, close to a heater, in a closed car, etc.) or high humidity (bathroom, outside on a rainy day, etc.). Doing so can result in deformation, discoloration, damage or deterioration.
- When cleaning the product, use a soft and dry/slightly damp cloth. Do not use paint thinners, solvents, alcohol, cleaning fluids, or chemical-impregnated wiping cloths.
- When connecting and disconnecting cables, be sure to hold the plug and not the cable itself. In addition, avoid placing heavy items on top of cables, and do not allow them to come into contact with sharp edges and the like. Failure to avoid these precautions can to cable breakage and unintended disconnection.

## **INFORMATION**

- The illustrations as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your product.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.
- The shell of this product is made from natural wood. The difference between the patterns, such as the wood grain, is natural and unique to your instrument.

Thank you for purchasing the Yamaha ELECTRONIC DRUM PAD KP128. This electronic drum pad can be used in your home or a studio, or onstage for live performances.

For proper assembly and safe use, read this manual carefully before using it. After you have read the manual, keep it in a safe and handy place for future reference.

## Contents


Precautions .....	5
Package Contents .....	8
Specifications .....	8
Assembling the KP128 .....	9
Making Connections .....	10
Adjusting the Output Level .....	11
Adjusting the Head Tension .....	12
Replacing the Patch .....	12
Replacing the Head .....	13
Troubleshooting.....	14

## Package Contents


\*: If you have purchased a pad set, refer to the “Assembly Manual” that came with it.

\* Foot pedal is sold separately.

❶ KP128 main unit × 1

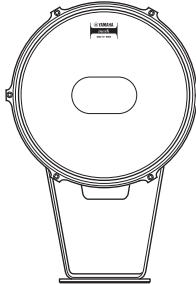

❷ Leg × 2

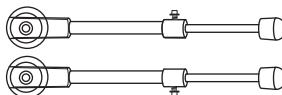

❸ Wing bolt × 2




❹ Flat washer × 2



❺ Anti-slip stopper  
(incl. spring) × 2



❻ Stereo phone cable × 2  
(clear, black)

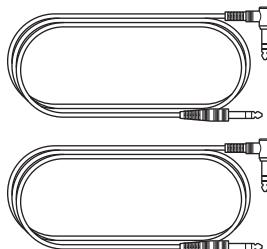

❼ Spare patch × 2



❽ Owner's Manual  
(this booklet) × 1



Keep these patches  
for future use.

The two cables are identical in function. Simply choose the one you want to use and keep the unused one in a safe place.

## Specifications

### ■ KP128 Kick Pad

- Size (assembled): 486 (w) × 224 (d) × 499 (h) mm
- Sensing method: Piezoelectric trigger-sensor element × 1
- Output connector: Standard stereo phone jack
- Input connector: Standard mono phone jack

\*: The contents of this manual apply to the latest specifications as of the publishing date. To obtain the latest manual, access the Yamaha website then download the manual file. Since specifications, equipment or separately sold accessories may not be the same in every locale, please check with your Yamaha dealer.

## Assembling the KP128

1. With the bolt ⑦ facing you, align the notch on the leg ① with the notch on the mounting ② as shown in ③. Put the washer ⑤ into the wing bolt ④, and then secure the leg to the KP128.

**NOTE** Since the flat washers are very small and can be easily lost, be careful when handling them.

\* If damage to the floor is not a concern, extend the stoppers at the tip of the legs ① and connect the anti-slip stoppers ⑥ to the base so that the tip of the stoppers dig into the riser or floor. To prevent damage to the floor, retract the stoppers at the legs ① and remove the anti-slip stoppers ⑥, and place a mat or carpet under the KP128 to prevent the KP128 from moving during performance. Keep removed anti-slip stoppers ⑥ in a safe place.

### ⚠ CAUTION

- Be careful of injuries when extending or retracting the stoppers at the tip of the legs ①.


2. Attach your foot pedal to the KP128. Adjust the leg's length loosening the bolts ⑦ so that the pad surface ⑨ of the KP128 is vertical when the foot pedal is attached, and the KP128 is stable when the beater hits the pad. After the position is determined, firmly tighten the bolts ⑦ to secure.

\* Place the underside of the foot pedal's base directly to the floor.


### ⚠ CAUTION

- Be careful when removing or replacing the pedal, since the KP128 may fall over.

3. Adjust the position of the pedal and the length of the beater shaft so that the foot pedal's beater ⑧ hits the patch in the center of the kick pad ⑨.

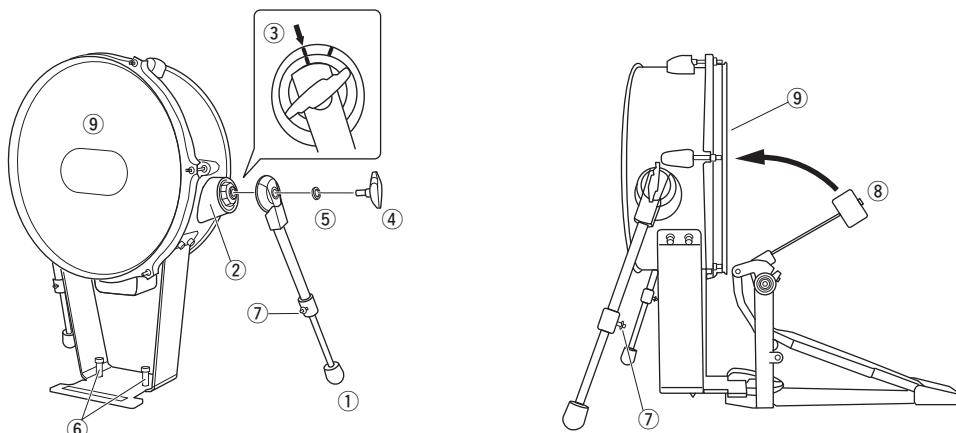

\* The KP128 can be used with a double foot pedal (YAMAHA DFP series, etc). When using a double foot pedal, make sure to adjust the position of the pedal and the length of the beater ⑧ so that the space between the two beaters is positioned within the inside of the patch at the center of the pad ⑨.

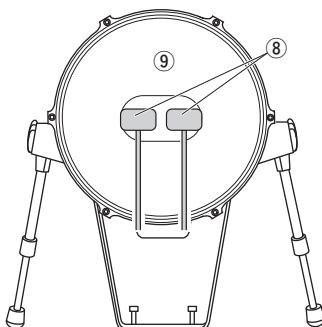


### NOTICE

- When storing the KP128 with the foot pedal detached, make sure to unplug the cable and set the KP128 flat. Otherwise the KP128 may fall down, which may result in damage to the cable.

## Making Connections

Using a stereo phone cable ① (included), connect the KP128's OUTPUT jack ② to an appropriate input jack on a DTX Series drum trigger module. Be sure to connect the L-shaped end of the cable to the KP128.


- NOTE**
- On the drum trigger module, set the corresponding pad type as a kick pad. Setting of any other pad type may have unintended consequences such as double triggering (where a single strike produces two distinct sounds). For more details, refer to the Owner's Manual included with the drum trigger module and/or to the page for your specific product on the Yamaha website.
  - If using the KP128 as a standalone pad with no other pad connected to it, a mono phone cable can also be used to make this connection to the drum trigger module.

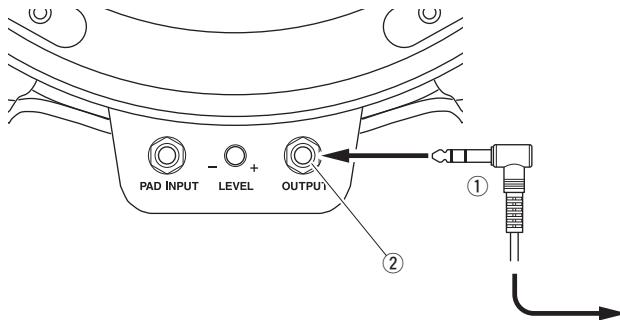

### ● Connecting an additional pad

The PAD INPUT jack ③ provided on the KP128 can be used to add an additional pad (sold separately). To do so, connect the output connector on the additional pad to the PAD INPUT jack ③ using a mono or stereo phone cable.


- NOTE**
- When connecting a drum trigger module and a KP128 having a pad connected via its PAD INPUT jack ③, the most suitable jack will depend on the type of module being used. For more details, refer to the Owner's Manual included with the drum trigger module and/or to the page for your specific product on the Yamaha website.
  - When you hit a pad connected to the PAD INPUT jack ③, only the main surface (head on the snare/tom pad, or bow on the hi-hat/cymbal pad) produce sound. No sound will be produced on any other section, such as the rim or edge. In addition, special functions using the rim switch (such as choking and muting) will not supported in such a case.

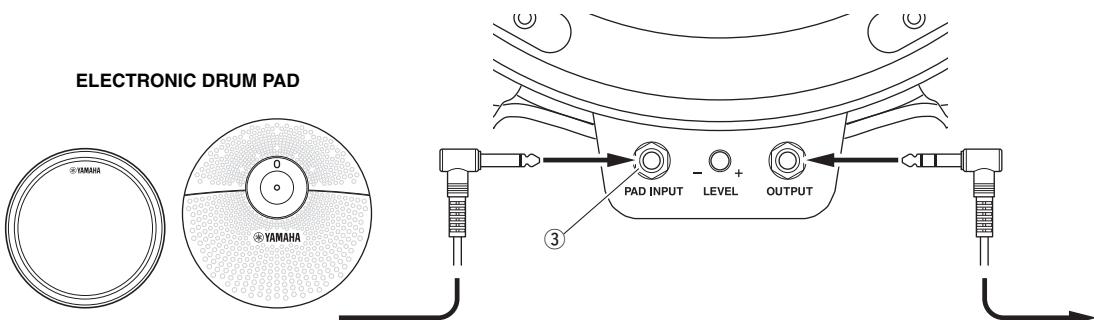

## Adjusting the Output Level

The output level from the KP128 can be raised by turning the level adjuster ① clockwise and vice-versa. Be sure to adjust this level to best suit the strength with which you strike the pad, your desired dynamic range (i.e., the difference between loudest and quietest volumes), and the type of DTX Series drum trigger module being used. If the level adjustment knob is turned all the way up but the output level is still low, raise the DTX Series Drum Trigger Module's input level using the Gain parameter from the trigger area.

**NOTE** If playing fortissimo (ff) passages with the KP128 connected to a DTX Series drum trigger module, the gain level on the module's trigger setup screen should be adjusted to between 90% and 95% of the displayed input level. For more details, refer to the Owner's Manual included with the drum trigger module and/or to the page for your specific product on the Yamaha website. Excessively large output levels can have unintended consequences such as a reduced dynamic range and double triggering (where a single strike produces two distinct sounds).

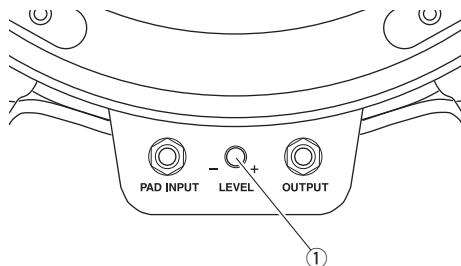


## Adjusting the Head Tension

### NOTICE

- The drum key bolts for tightening the head can be loosened while using. Each time before you play, adjust the head tension to prevent rattling and loosening of the head.

To adjust the head tension, tighten or loosen the six drum key bolts on the outside of the head in the order shown in the figure below. Make sure to tighten or loosen the drum key bolts evenly. If you tighten or loosen only one, the head tension will not be even.

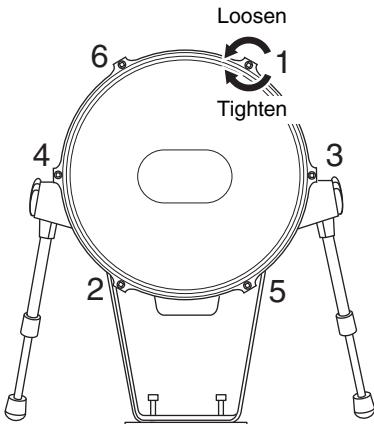

### NOTICE

- Do not use a long handle drum key (such as a high-torque drum key or high-tension drum key) to tighten the head. Over-tightening can damage your drum.




### NOTE

- The drum key can be found in the pad set package.
- Avoid over-tightening the bolts. If you hear a creaking sound in the wooden body, loosen the bolts slightly.
- The head is properly tightened when the surface is smooth, with no wrinkles, yet sinks a little when you press the center.
- Unlike acoustic drums, electronic drums have the same tone even when the head tension is changed. Adjusting the head tension is necessary to adjust the feel and prevent malfunction.


## Replacing the Patch

The patch is made from consumable material, and may need to be replaced when it becomes wrinkled, torn, or peeled. This product contains two spare patches, if they are used or missing, contact your dealer or qualified Yamaha service personnel. Patching the contact area with the beater can reduce wear on the head and beater.

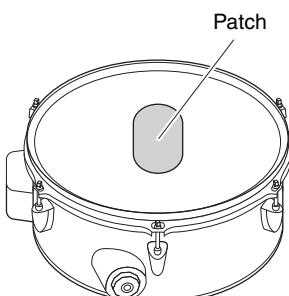

## Replacing the Head

The head is made from consumable material, and may need to be replaced to prevent malfunction when partial discoloration, sagging, fraying, tearing, or scraping appears. For information on replacement parts, contact your dealer or qualified Yamaha service personnel.

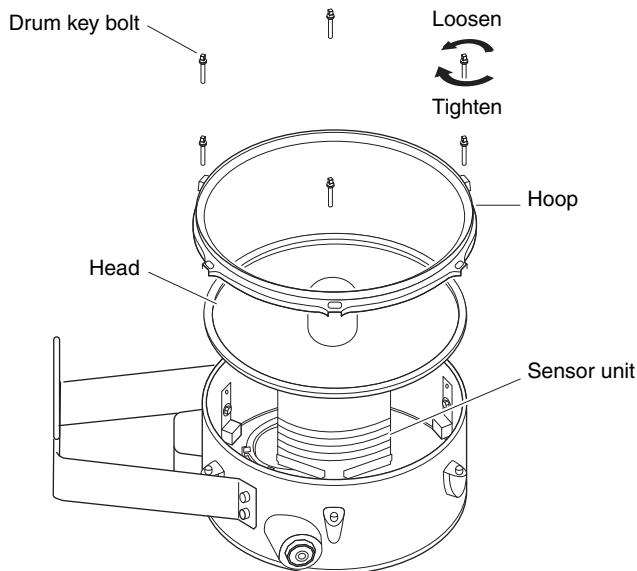

1. Remove all six drum key bolts using the drum key.

**NOTE** The drum key can be found in the pad set package.

2. Remove the hoop.
3. Remove the old head, and then replace it with the new one. (The head can be installed in any direction.)

**NOTICE**

- Do not touch the sensor unit, to avoid causing damage to the parts.

4. Attach the hoop, and then temporarily fix it with the drum key bolts.

5. Adjust the head tension.

Refer to the "Adjusting the Head Tension" (on page 12).

6. Apply a new patch so that the beater hits the center of the patch.

**NOTICE**

- If the kick pad is used without a patch, the head and beater will wear out faster and may cause damage.

The head replacement is now complete.

## Troubleshooting

### No sound is produced or the volume is too Low, Sound output does not match your feeling.

- Is the head tension loose? Loose head tension may cause various problems. (See Adjusting the Head Tension.)
- Ensure that the KP128 is correctly connected to a DTX Series drum trigger module using the stereo phone cable provided. (See Making Connections.)
- Check the pad's output level. If this level is too low, use the level adjuster to increase it. (See Adjusting the Output Level.)
- If no sound is produced when the pad is struck softly, lower the setting of the Minimum Level parameter from the module's trigger area.
- Check that the base's position is adjusted so that the beater hits the center of the pad correctly. (See Assembling the KP128.)

### Two or more sounds are produced in response to a single strike (i.e., double-triggering).

- Check the pad's output level. If this level is too high, use the level adjuster to reduce it. Note that triggering of two or more sounds occurs when the output level is excessively high due to the fact that the signal being input into the drum trigger module remains large for a relatively long period of time. (See Adjusting the Output Level.)

### When playing the foot pedal, a part of the foot pedal hits the KP128.

- Is the pad surface of the KP128 vertical? A part of the foot pedal may hit the KP128 if the KP128 is tilted toward the player side. Follow step 2 on page 9 to adjust the leg length on the KP128 so that the pad surface of the KP128 is vertical.

For more troubleshooting tips, refer to the Owner's Manual included with the DTX Series drum trigger module and/or to the page for your specific product on the Yamaha website. If you still cannot find the information you need to resolve a problem, contact your Yamaha dealer or the customer support center indicated at the end of this manual for assistance.

# Drums Limited Warranty

## LIMITED WARRANTY ON YAMAHA DRUMS, HARDWARE AND ACCESSORY PRODUCTS

Thank you for selecting a YAMAHA product. YAMAHA products are designed and manufactured to provide a high level of defect-free performance. Yamaha Corporation of America ("YAMAHA") is proud of the experience and craftsmanship that goes into each and every YAMAHA product. YAMAHA sells its products through a network of reputable, specially authorized dealers and is pleased to offer you, the Original Owner, the following Limited Warranty, which applies only to products that have been (1) directly purchased from YAMAHA's authorized dealers in the fifty states of the USA and District of Columbia (the "Warranted Area") and (2) used exclusively in the Warranted Area. YAMAHA suggests that you read the Limited Warranty thoroughly, and invites you to contact your authorized YAMAHA dealer or YAMAHA Customer Service if you have any questions.

### THIS WARRANTY COVERS THE LISTED PRODUCTS AGAINST DEFECTS IN MATERIALS OR WORKMANSHIP.

#### Warranty Term

Type of Product	Duration of Warranty from Date of Purchase by or for the Original Owner
Acoustic Drum Shells, Finish, Drum Hardware, Freestanding Hardware, Pedals, Hardware Accessories	5 Years
Electronic Drums Modules, Pads, Accessories, Hardware, Pedals	1 Year

**Coverage:** YAMAHA will, at its option, repair or replace the product covered by this warranty if it becomes defective, malfunctions or otherwise fails to conform with this warranty under normal use and service during the term of this warranty, without charge for labor or materials. Repairs may be performed using new or refurbished parts that meet or exceed YAMAHA specifications for new parts. If YAMAHA elects to replace the product, the replacement may be a reconditioned unit. You will be responsible for any installation or removal charges and for any initial shipping charges if the product(s) must be shipped for warranty service. However, YAMAHA will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty. This warranty does not cover (a) damage, deterioration or malfunction resulting from accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions according to the Owner's Manual for this product; any shipment of the product (claims must be presented to the carrier); repair or attempted repair by anyone other than YAMAHA or an authorized YAMAHA Service Center; (b) any unit which has been altered or on which the serial number has been defaced, modified or removed; (c) normal wear and any periodic maintenance; (d) deterioration due to perspiration, corrosive atmosphere or other external causes such as extremes in temperature or humidity; (e) damages attributable to power line surge or related electrical abnormalities, lightning damage or acts of God; or (f) RFI/EMI (Interference/noise) caused by improper grounding or the improper use of either certified or uncertified equipment, if applicable. Any evidence of alteration, erasing or forgery of proof-of-purchase documents will cause this warranty to be void. This warranty covers only the Original Owner and is not transferable.

**In Order to Obtain Warranty Service:** Warranty service will only be provided for defective products within the Warranted Area. Contact your local authorized YAMAHA dealer who will advise you of the procedures to be followed. If this is not successful, contact YAMAHA at the address, telephone number or website shown below. YAMAHA may request that you send the defective product to a local authorized YAMAHA Servicer or authorize return of the defective product to YAMAHA for repair. If you are uncertain as to whether a dealer has been authorized by YAMAHA, please contact YAMAHA's Service Department at the number shown below, or check Yamaha's website at <http://usa.yamaha.com>. Products(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, together with the original or a machine reproduction of the bill of sale or other dated, proof-of-purchase document describing the product, as evidence of warranty coverage. Should any product submitted for warranty service be found ineligible therefore, an estimate of repair cost will be furnished and the repair will be accomplished only if requested by you and upon receipt of payment or acceptable arrangement for payment.

**Limitation of Implied Warranties and Exclusion of Damages:** ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE APPLICABLE PERIOD OF TIME SET FORTH ABOVE. YAMAHA SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE OR INTERRUPTION OF PERFORMANCES OR ANY CONSEQUENCES. YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT YAMAHA'S OPTION. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is the only express warranty applicable to the product specified herein; Yamaha neither assumes nor authorizes anyone to assume for it any other express warranty.

If you have any questions about service received or if you need assistance in locating an authorized YAMAHA Servicer, please contact:



CUSTOMER SERVICE

Yamaha Corporation of America  
6600 Orangethorpe Avenue, Buena Park, California 90620-1373  
Telephone: 800-854-1569 • <http://usa.yamaha.com>

**Do not return any product to the above address without a written Return Authorization issued by YAMAHA.**

# Important Notice: Guarantee Information for customers in European Economic Area (EEA) and Switzerland

<b>Important Notice: Guarantee Information for customers in EEA* and Switzerland</b> For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area	<b>English</b>
<b>Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz</b> Für nähere Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EWR* und Schweizer Garantiservice, besuchen Sie bitte entweder die folgend angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb. *EWR: Europäischer Wirtschaftsraum	<b>Deutsch</b>
<b>Remarque importante: informations de garantie pour les clients de l'EEE et la Suisse</b> Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence. *EEE : Espace Economique Européen	<b>Français</b>
<b>Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland</b> Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantiservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vindt een afdrukbaar bestand op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. * EER: Europese Economische Ruimte	<b>Nederlands</b>
<b>Aviso importante: información sobre la garantía para los clientes del EEE* y Suiza</b> Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir esta disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. *EEE: Espacio Económico Europeo	<b>Español</b>
<b>Avviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera</b> Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattare l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea	<b>Italiano</b>
<b>Aviso importante: informações sobre as garantias para clientes da AEE* e da Suíça</b> Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país. * AEE: Área Económica Europeia	<b>Português</b>
<b>Σημαντική σημείωση: Πληροφορίες εγγύησης για τους πελάτες στον ΕΟΧ* και Ελβετία</b> Για λεπτομερείς πληροφορίες εγγύησης σχετικά με το παρόν πρόϊόν της Yamaha και την κάλυψη εγγύησης σε όλες τις χώρες του ΕΟΧ και την Ελβετία, επισκεφτείτε την παρακάτω ιστοσελίδα (Εκτυπώστε μορφή είσαι διαθέσιμη στην ιστοσελίδα μας) ή απευθυνθείτε στην αντιπροσωπεία της Yamaha στη χώρα σας. * ΕΟΧ: Ευρωπαϊκό Οικονομικό Χώρος	<b>Ελληνικά</b>
<b>Viktigt: Garantiinformation för kunder i EES-området* och Schweiz</b> För detaljerad information om denna Yamahaproduct samt garantiservice i hela EES-området* och Schweiz kan du antingen besöka nedanstående webbadress (en utskriftsvänlig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. *EES: Europeiska Ekonomiska Samarbetsområdet	<b>Svenska</b>
<b>Viktig merknad: Garantiinformasjon for kunder i EØS* og Sveits</b> Detaljert garantiinformasjon om dette Yamahaproduktet og den garantiservice for hele EØS-området* og Sveits kan fås enten ved å besøke nettadressen nedenfor (utskriftsversjon finnes på våre nettsider) eller kontakte Yamahas nasjonale representationskontor i det land, hvor De bor. *EØS: Det europeiske økonomiske samarbeidsområdet	<b>Norsk</b>
<b>Vigtig oplysning: Garantioplysninger til kunder i EØO* og Schweiz</b> De kan finde detaljerede garantioplysninger om dette Yamahaproduct og den fælles garantiserviceordning for EØO* (og Schweiz) ved at besøge det websted, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores websted), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. *EØO: Det Europæiske Økonomiske Område	<b>Dansk</b>
<b>Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA)* ja Sveitsin asiakkaille</b> Tämän Yamaha-tuotteen sekä ETA-alueen ja Sveitsin takuu koskevat yksityiskohtaiset tiedot saatte alla olevasta nettosoitteesta. (Tulostettava tiedosto saatavissa sivustollamme.) Voitte myös ottaa yhteyttä paikalliseen Yamaha-edustajaan. *ETA: Euroopan talousalue	<b>Suomi</b>
<b>Ważne: Warunki gwarancyjne obowiązujące w EOG* i Szwajcarii</b> Aby dowiedzieć się więcej na temat warunków gwarancyjnych tego produktu firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną poniżej stronę internetową (Plik gotowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju. *EOG — Europejski Obszar Gospodarczy	<b>Polski</b>
<b>Důležité oznámení: Záruční informace pro zákazníky v EHS* a ve Švýcarsku</b> Podrobnej záruční informace o tomto produkту Yamaha a záručním servisu v celém EHS* a ve Švýcarsku naleznete na niže uvedené webové adrese (soubor k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zastoupení firmy Yamaha ve své zemi. * EHS: Evropský hospodářský prostor	<b>Český</b>
<b>Fontos figyelmezettség: Garancia-információk az EGT* területén és Svájcban</b> A jelen Yamaha termékre vonatkozó részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciális szolgáltatás tekintetében keresse fel webhelyünket az alábbi címen (a webhelyen nyomtatatható fájl is talál), vagy pedig lépjön kapcsolatba az országában működő Yamaha képviseleti irodával. * EGT: Európai Gazdasági Térseg	<b>Magyar</b>
<b>Oluline märkus: Garantiitervee Europa Majanduspiirkonna (EMP)* ja Šveitsi klientidele</b> Täpseme teabe saamiseks selle Yamaha tööde garantii ning kogu Euroopa Majanduspiirkonna ja Šveitsi garantiiteeninduse kohta, külalstage palun veebisaiti alljärgneval aadressil (meie saidil on saadaval prinditav fail) või pöörduge Teie regiooni Yamaha esinduse poole. * EMP: Euroopa Majanduspiirkond	<b>Eesti keel</b>
<b>Svarīgs pazīsojums: garantijas informācija klientiem EEZ* un Šveicē</b> Lai saņemtu detalizētu garantijas informāciju par šo Yamaha produktu, kā arī garantijas apkalpošanu EEZ* un Šveicē, lūdzu, apmeklējet zemāk norādīto tīmekļa vietnes adresi (tīmekļa vietnē ir pieejams drukājams fails) vai sazinieties ar jūsu valsti apkalpojošo Yamaha pārstāvniecību. * EEZ: Eiropas Ekonomikas zona	<b>Latviešu</b>
<b>Dėmesio: informacija dėl garantijos pirkėjams EEE* ir Šveicarijoje</b> Jei reikia išsamios informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijoje, apsilankykite mūsų svetainēje toliau nurodytu adresu (svetainēje yra spausdinimas failas) arba kreipkitės į „Yamaha“ atstovą savo šali. *EEE – Europos ekonominė erdvė	<b>Lietuviai kalba</b>
<b>Dôležité upozornenie: Informácie o záruke pre zákazníkov v EHP* a Švajčiarsku</b> Podrobnejšie informácie o záruke týkajúce sa tohto produktu od spoločnosti Yamaha a garančnom servise v EHP* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbor na tlač) alebo sa obráťte na zástupcu spoločnosti Yamaha vo svojej krajinе. *EHP: Európsky hospodársky priestor	<b>Slovenčina</b>
<b>Pomembno obvestilo: Informacije o garanciji za kupce v EGP* in Švicariji</b> Za podrobnejše informacije o tem Yamahinem izdelku ter garancijskem servisu v celotnem EGP in Švicariji, obiščite spletno mesto, ki je navedeno spodaj (natisljiva datoteka je na voljo na našem spletnem mestu), ali se obrite na Yamahinega predstavnika v svoji državi. * EGP: Evropski gospodarski prostor	<b>Slovenščina</b>
<b>Важно съобщение: Информация за гаранцията за клиенти в ЕИП* и Швейцария</b> За подробна информация за гаранцията за този продукт на Yamaha и гаранционното обслужване в паневропейската зона на ЕИП* и Швейцария или посетете посочения по-долу уеб сайт (на нашия уеб сайт има файл за печат), или се свържете с представителния офис на Yamaha във вашата страна. * ЕИП: Европейско икономическо пространство	<b>Български език</b>
<b>Notificare importantă: Informații despre garanție pentru clienții din SEE* și Elveția</b> Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE* și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanței Yamaha din țara dumneavoastră. * SEE: Spațiul Economic European	<b>Limba română</b>
<b>Važna obavijest: Informacije o jamstvu za države EGP-a i Švicarske</b> Za detaljne informacije o jamstvu za ovaj Yamahin proizvod tejamstvenom servisu za cijeli EGP i Švicarsku, molimo Vas da posjetite web-stranicu navedenu u nastavku ili kontaktirate ovlaštenog Yamahinog dobavljača u svojoj zemlji. * EGP: Evropski gospodarski prostor	<b>Hrvatski</b>

<https://europe.yamaha.com/warranty/>

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Die Einzelheiten zu Produkten sind bei Ihrer unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

## NORTH AMERICA

### CANADA

#### Yamaha Canada Music Ltd.

135 Milner Avenue, Toronto, Ontario M1S 3R1, Canada

Tel: +1-416-298-1311

### U.S.A.

#### Yamaha Corporation of America

6600 Orangethorpe Avenue, Buena Park, CA 90620, U.S.A.

Tel: +1-714-522-9011

## CENTRAL & SOUTH AMERICA

### MEXICO

#### Yamaha de México, S.A. de C.V.

Av. Insurgentes Sur 1647 Piso 9, Col. San José Insurgentes, Delegación Benito Juárez, CDMX, C.P. 03900, México

Tel: +52-55-5804-0600

### BRAZIL

#### Yamaha Musical do Brasil Ltda.

Praca Professor José Lannes, 40-Cjs 21 e 22, Brooklin Paulista Novo CEP 04571-100 – São Paulo – SP, Brazil

Tel: +55-11-3704-1377

### ARGENTINA

#### Yamaha Music Latin America, S.A., Sucursal Argentina

Olga Cossettini 1553, Piso 4 Norte, Madero Este-C1107CEK, Buenos Aires, Argentina

Tel: +54-11-4119-7000

### PANAMA AND OTHER LATIN AMERICAN REGIONS/

### CARIBBEAN REGIONS

#### Yamaha Music Latin America, S.A.

Edificio Torre Davivienda, Piso: 20 Avenida Balboa, Marbella, Corregimiento de Bella Vista, Ciudad de Panamá, Rep. de Panamá Tel: +507-269-5311

## EUROPE

### THE UNITED KINGDOM/IRELAND

#### Yamaha Music Europe GmbH (UK)

Sherbourne Drive, Tilbrook, Milton Keynes, MK7 8BL, U.K.

Tel: +44-1908-366700

### GERMANY

#### Yamaha Music Europe GmbH

Siemensstrasse 22-34, 25462 Rellingen, Germany

Tel: +49-4101-303-0

### SWITZERLAND/LIECHTENSTEIN

#### Yamaha Music Europe GmbH, Branch Switzerland

Seestrasse 18a, 8800 Thalwil, Switzerland

Tel: +41-44-3878080

### AUSTRIA/CROATIA/CZECH REPUBLIC/HUNGARY/ROMANIA/SLOVAKIA/

### SLOVENIA

#### Yamaha Music Europe GmbH, Branch Austria

Schleiergasse 20, 1100 Wien, Austria

Tel: +43-1-60203900

### POLAND

#### Yamaha Music Europe

Sp.z o.o. Oddział w Polsce ul. Wielicka 52, 02-657 Warszawa, Poland

Tel: +48-22-880-08-88

### BULGARIA

#### Dinacord Bulgaria LTD.

Bul. Iskarsko Schosse 7 Targowski Zentar Ewropa 1528 Sofia, Bulgaria

Tel: +359-2-978-20-25

### MALTA

#### Olimpus Music Ltd.

Vallletta Road, Mosta MST9010, Malta

Tel: +356-2133-2093

### NETHERLANDS/BELGIUM/LUXEMBOURG

#### Yamaha Music Europe, Branch Benelux

Clarissenhof 5b, 4133 AB Vianen, The Netherlands

Tel: +31-347-358040

## FRANCE

#### Yamaha Music Europe

7 rue Ambroise Croizat, Zone d'activités de Pariest, 77183 Croissy-Beaubourg, France

Tel: +33-1-6461-4000

## ITALY

#### Yamaha Music Europe GmbH, Branch Italy

Via Timelli N.67/69 20855 Gerno di Lesmo (MB), Italy

Tel: +39-039-9065-1

## SPAIN/PORTUGAL

#### Yamaha Music Europe GmbH Ibérica, Sucursal en España

Ctra. de la Coruña km. 17,200, 28231 Las Rozas de Madrid, Spain

Tel: +34-91-639-88-88

## GREECE

#### Philippos Nakas S.A. The Music House

19th klm. Leof. Lavriou 190 02 Peania – Attiki, Greece

Tel: +30-210-6686260

## SWEDEN

#### Yamaha Music Europe GmbH Germany Filial Scandinavia

JA Wettergrensgata 1, 400 43 Göteborg, Sweden

Tel: +46-31-89-34-00

## DENMARK

#### Yamaha Music Denmark,

Filial of Yamaha Music Europe GmbH, Tyskland

Generatorvej 8C, ST. TH., 2860 Soborg, Denmark

Tel: +45-44-92-49-00

## FINLAND

#### F-Musiikki Oy

Antaksentie 4

FI-01510 Vantaa, Finland

Tel: +358 (0)96185111

## NORWAY

#### Yamaha Music Europe GmbH Germany - Norwegian Branch

Grini Neringspark 1, 1332 Østerås, Norway

Tel: +47-6716-7800

## ICELAND

#### Hjóðfaðrahusid Ehf.

Síðumula 20

IS-108 Reykjavík, Iceland

Tel: +354-525-5050

## CYPRUS

#### Nakas Music Cyprus Ltd.

Nikis Ave 2k

1086 Nicosia

Tel: +357-22-511080

## RUSSIA

#### Yamaha Music (Russia) LLC.

Room 37, entrance 7, bld. 7, Kievskaya street,

Moscow, 121059, Russia

Tel: +7-495-626-5005

## OTHER EUROPEAN REGIONS

#### Yamaha Music Europe GmbH

Siemensstrasse 22-34, 25462 Rellingen, Germany

Tel: +49-4101-303-0

## AFRICA

#### Yamaha Music Gulf FZE

JAFZA-16, Office 512, P.O.Box 17328,

Jebel Ali FZE, Dubai, UAE

Tel: +971-4-801-1500

## MIDDLE EAST

## TURKEY

#### Yamaha Music Europe GmbH

Merkezi Almanya Türkiye İstanbul Şubesi

Mor Sumbul Sokak Varyap Meridian Business

1.Blok No:1 113-114-115

Bati Atasehir Istanbul, Turkey

Tel: +90-216-275-7960

## ISRAEL

#### RBX International Co., Ltd.

P.O Box 10245, Petach-Tikva, 49002

Tel: (972) 3-925-6900

## OTHER REGIONS

#### Yamaha Music Gulf FZE

JAFZA-16, Office 512, P.O.Box 17328,

Jebel Ali FZE, Dubai, UAE

Tel: +971-4-801-1500

## ASIA

### THE PEOPLE'S REPUBLIC OF CHINA

#### Yamaha Music & Electronics (China) Co., Ltd.

2F, Yunhedasha, 1818 Xinzha-lu, Jingan-qu,

Shanghai, China

Tel: +86-400-051-7700

### HONG KONG

#### Tom Lee Music Co., Ltd.

1/F, Silvercord Tower 1, 30 Canton Road,

Tsimshatsui, Kowloon, Hong Kong

Tel: +852-2737-7688

### INDIA

#### Yamaha Music India Private Limited

P-401, JMD Megapolis, Sector-48, Sohna Road,

Gurugram-122018, Haryana, India

Tel: +91-124-485-3300

### INDONESIA

#### PT Yamaha Musik Indonesia Distributor

Yamaha Music Center Bldg. Jalan Jend. Gatot Subroto Kav. 4, Jakarta 12930, Indonesia

Tel: +62-21-520-2577

### KOREA

#### Yamaha Music Korea Ltd.

11F, Prudential Tower, 298, Gangnam-daeo,

Gangnam-gu, Seoul, 06253, Korea

Tel: +82-2-3467-3300

### MALAYSIA

#### Yamaha Music (Malaysia) Sdn. Bhd.

No.8, Jalan Perbandaran, Kelana Jaya, 47301

Petaling Jaya, Selangor, Malaysia

Tel: +60-3-78030900

### SINGAPORE

#### Yamaha Music (Asia) Private Limited

Block 202 Hougang Street 21, #02-00,

Singapore 530202, Singapore

Tel: +65-6740-9200

### TAIWAN

#### Yamaha Music & Electronics Taiwan Co., Ltd.

2F, No.1, Yuandong Rd., Banqiao Dist.,

New Taipei City 22063, Taiwan (R.O.C.)

Tel: +886-2-7741-8888

### THAILAND

#### Siam Music Yamaha Co., Ltd.

3, 4, 15, 16th Fl., Siam Motors Building,

89/1 Rama 1 Road, Wangmai,

Pathumwan, Bangkok 10330, Thailand

Tel: +66-2215-2622

### VIETNAM

#### Yamaha Music Vietnam Company Limited

15th Floor, Nam A Bank Tower, 201-203 Cach

Mang Thang Tam St., Ward 4, Dist.3,

Ho Chi Minh City, Vietnam

Tel: +84-28-3818-1122

### OTHER ASIAN REGIONS

<https://asia-latinamerica-me.a.yamaha.com/index.html>

## OCEANIA

### AUSTRALIA

#### Yamaha Music Australia Pty. Ltd.

Level 1, 80 Market Street, South Melbourne,

VIC 3205 Australia

Tel: +61-3-9693-5111

### NEW ZEALAND

#### Music Works LTD

P.O.BOX 6246 Wellesley, Auckland 4680,

New Zealand

Tel: +64-9-634-0099

### REGIONS AND TRUST

### TERRITORIES IN PACIFIC OCEAN

<https://asia-latinamerica-me.a.yamaha.com/index.html>

## **雅马哈乐器音响（中国）投资有限公司**

上海市静安区新闸路1818号云和大厦2楼

客户服务热线：4000517700

公司网址：<http://www.yamaha.com.cn>

厂名：萧山雅马哈乐器有限公司

厂址：浙江省杭州市萧山经济技术开发区红泰六路777号

©2020 Yamaha Corporation

Published 06/2022

2022年6月 发行

MWXY-B0

**VGE1670**