

© 2025 Yamaha Corporation
Published 01/2025
II-A0

[illegible]

Sorszám	P-145BT	P-143BT
1	GRAND PIANO 1 (Koncertzongora 1)	GRAND PIANO 1 (Koncertzongora 1)
2	GRAND PIANO 2 (Koncertzongora 2)	GRAND PIANO 2 (Koncertzongora 2)
3	E. PIANO 1 (Elektromos zongora 1)	E. PIANO 1 (Elektromos zongora 1)
4	E. PIANO 2 (Elektromos zongora 2)	E. PIANO 2 (Elektromos zongora 2)
5	PIPE ORGAN 1 (Templomi orgona 1)	PIPE ORGAN 1 (Templomi orgona 1)
6	PIPE ORGAN 2 (Templomi orgona 2)	PIPE ORGAN 2 (Templomi orgona 2)
7	HARPSICHORD (Csembaló)	HARPSICHORD 1 (Csembaló 1)
8	ACCORDION (Harmonika)	HARPSICHORD 2 (Csembaló 2)
9	DI ZI (Di zi)	VIBRAPHONE (Vibrafon)
10	STRINGS (Vonósok)	STRINGS (Vonósok)

Sorszám	Cím	Szerző
1	Menuett G dur BWV Anh.114	J. S. Bach
2	Turkish March	W. A. Mozart
3	Für Elise	L. v. Beethoven
4	Valse op.64-1 "Petit chien"	F. F. Chopin
5	Träumerei	R. Schumann
6	Dolly's Dreaming and Awakening	T. Oesten
7	Arabesque	J. F. Burgmüller
8	Humoresque	A. Dvořák
9	The Entertainer	S. Joplin
10	La Fille aux Cheveux de Lin	C. A. Debussy

GRAND PIANO

FUNCTION

A line drawing of a hand with the index finger pressing a rectangular button labeled 'FUNCTION'. The button is positioned below the 'GRAND PIANO' label.

Tartsa lenyomva több mint 3 másodpercig