




Yamaha Hi-Fi Stereo

**STEREO/
PRE-MAIN AMPLIFIER**

Owner's Manual

CA-600

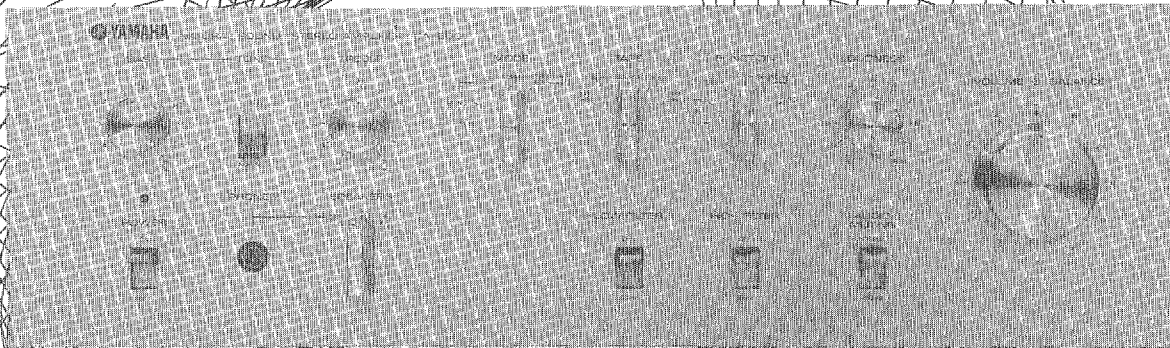

CENTER

CONTENTS

Congratulations upon your selection of the Yamaha CA-600, one of the world's finest stereo pre-main amplifiers.

Please read this manual carefully to avoid errors in connection, placing and operation, in order to derive all the years of outstanding listening pleasure your CA-600 was built to provide.

FEATURES	3
PRECAUTIONS	3
OTHER PARTS OF YOUR AUDIO SYSTEM	
Speaker Connection	4
Record Player Connection and Operation	5
Tape Deck Connection and Operation	6
Tuner Connection and Operation	7
Aux. 1, 2 Connection and Operation	8
Headphone Connection	8
Microphone Connection	9
Pre-Out, Main In Connection and Operation	9
CONNECTION DIAGRAM	10
FRONT PANEL PARTS AND FUNCTIONS	12
REAR PANEL PARTS AND FUNCTIONS	
TYPE A Model	14
TYPE B Model	15
TYPE C Model	16
TYPE D Model	17
TYPE E Model	18
CONTROLS	
Loudness Controls	19
Muting Switch	20
Mode Switch	20
Tone Controls	21
Balance Adjustment	21
Low & High Filters	22
TROUBLESHOOTING	23
SPECIFICATIONS	24
BLOCK DIAGRAM	26

FEATURES

- Input capacity 310mV rms, RIAA deviation ± 0.2 dB thanks to four-stage direct NFB equalizer amp and special input impedance matching switch.
- Ultra-low distortion pure complementary all-stage direct-coupled OCL main amp.
- Continuous loudness control lets you match the response to any volume level.
- A pair of 4,700 μ F capacitors assure constant voltage supply at all times.
- Transistorized relay type speaker protector circuits.
- Panel designed for the last word in control convenience, balanced by luxury wood cabinetry.

PRECAUTIONS

For optimum performance and service life, be sure to read this manual carefully before connecting or operating the CA-600. Pay special attention to the following points.


- Avoid exposing the unit to direct sunlight or excessive heat.
- After the power is switched on, no sound will be heard from the speakers for approximately five seconds. This is due to the working of the shock noise protection circuit. After this period the circuit normally goes off and the speakers will sound.
- Be sure to operate all switches according to the explanations which follow in this manual. Be careful to avoid sudden surges of power or sudden shutoffs in any mode.
- When adjusting the volume, be sure to set the loudness to Flat position. Then, if the volume level is low enough to require this effect, turn the knob to the left until the proper setting is reached.
- When connecting or disconnecting input and output cords, make sure the volume switch is turned down all the way and that the power switch is off.

- Do not clean the exterior with thinner or other volatile products. If some thinner or insecticide does spill on the cabinet by accident, wipe it off immediately.

If your stereo has a voltage selector, before you plug in the power cord check that the selector is set to your local current.

If not properly set, turn the knob and reset it to the correct position.

Voltage settings: 110, 130, 220, 240V (the 150, 260V settings are not connected.)

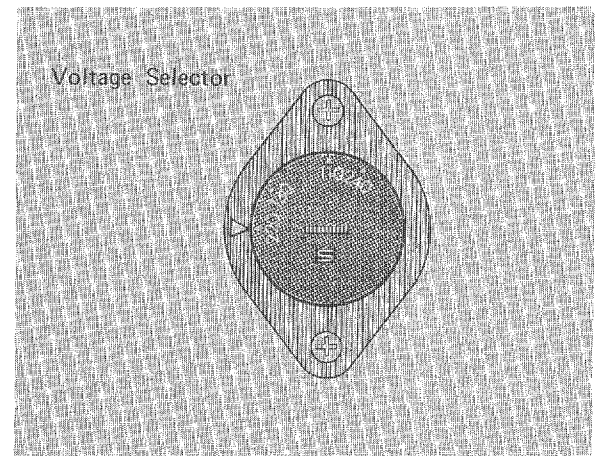

OTHER PARTS OF YOUR AUDIO SYSTEM

SPEAKER CONNECTION


There are two sets of speaker terminals on the rear panel (A and B). This lets you connect two sets of stereo speakers in different parts of your home, and then switch them on and off in any combination using the front panel speaker selector. The selector has, in addition to A and B settings, combination possibilities: A + B.

Make sure the impedance of all connected speaker systems is 8Ω , or use just one system if it is 4Ω .

With the selector switch set to OFF no sound will be heard from any of the speakers. This is the setting for private listening via the headphones.

NOTES:

- Make sure to connect the left speaker (as seen from the listening position) to the L terminals, the right to R, in any set.
- Be especially careful not to mix the (+) and (-) leads. This can cause an out-of-phase signal and reduce stereo response (see Fig.1).
- The speaker terminals are push-lever types. As shown in Fig. 2, simply hold down the lever, insert the bare end of the lead fully into the hole and then release the lever. The wire is held by spring pressure.
- If one or both leads from a speaker are not fully connected, there will be no sound from that speaker. Be sure each lead is securely locked into the terminal.

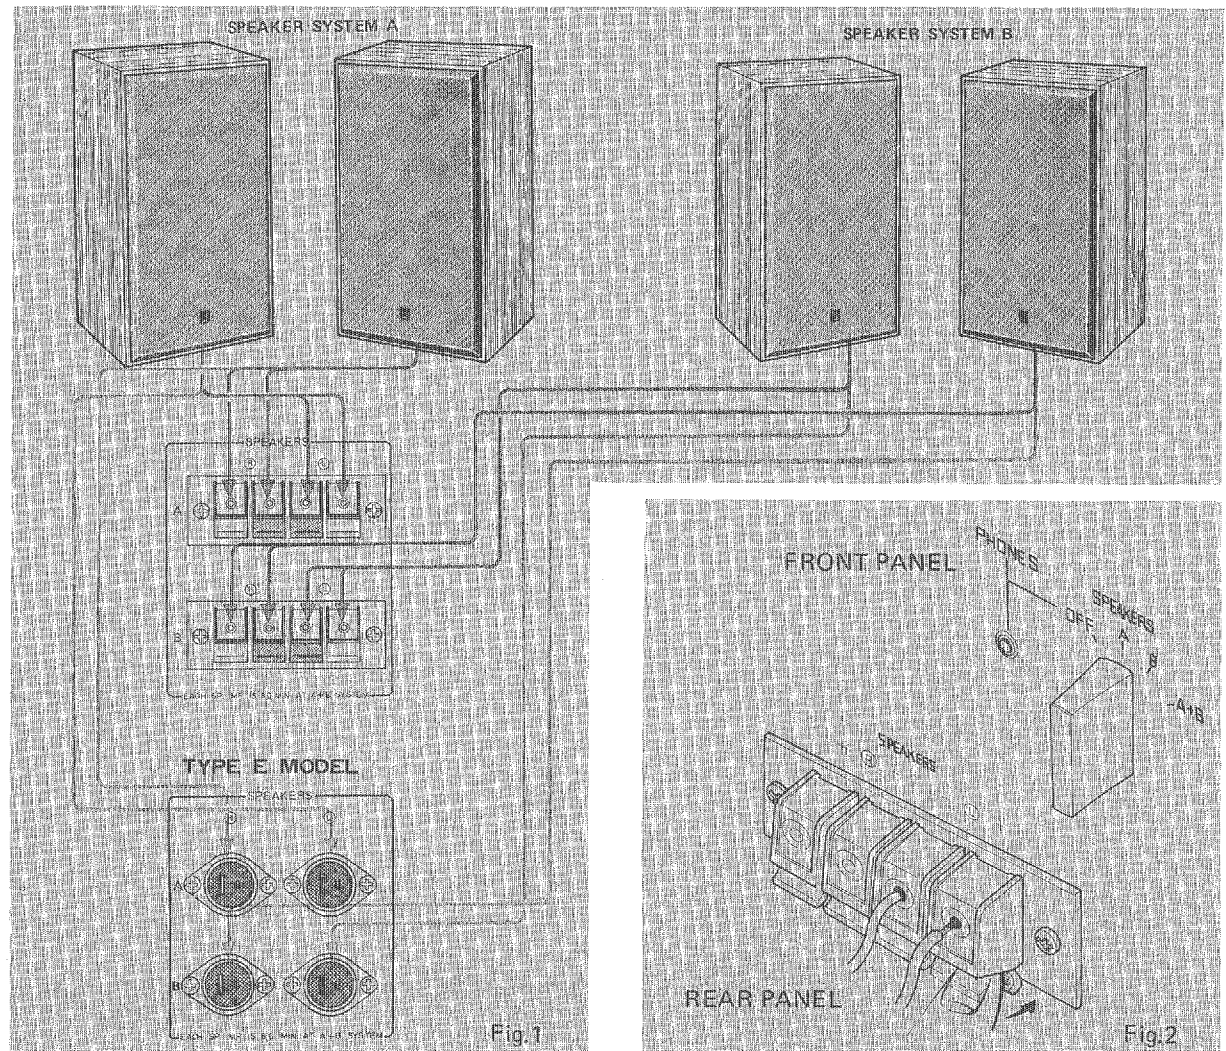

RECORD PLAYER CONNECTION AND OPERATION

There are two sets of Phono inputs, permitting connection of two record players with moving magnet cartridges. In addition, the Phono 1 terminals can be switched via the Input Imp. selector to accept signals from a record player with a moving magnet (MV), an induced magnet (IM) or a moving iron (MI) cartridge. (30k Ω , 50k Ω or 100k Ω —See Fig.3)

Note: Be sure to carefully read the record player owner's manual, as well as that for the cartridge, before connecting the player to the Phono 1 jacks. The Input Imp. switch on the CA-600 is set at 50k Ω when the unit leaves the factory.

Be careful not to mix the left and right signal cords from the turntable when connecting to either Phono 1 or Phono 2 jacks. If there is also a ground wire from the record player, firmly connect it to the GND terminal on the CA-600 rear panel.

Note: The set is delivered from the factory with a short pin across the Phono 2 jacks. Remove this pin before using them.

When you listen to a record, be sure to first set the function switch on the front panel to the proper setting (Phono 1 or Phono 2). Then the record sound can be heard from the speakers or headphone, according to that selector setting.

If your turntable has a crystal or ceramic cartridge, do not use the Phono jacks. Instead, connect the record player to one of the Aux jack sets.

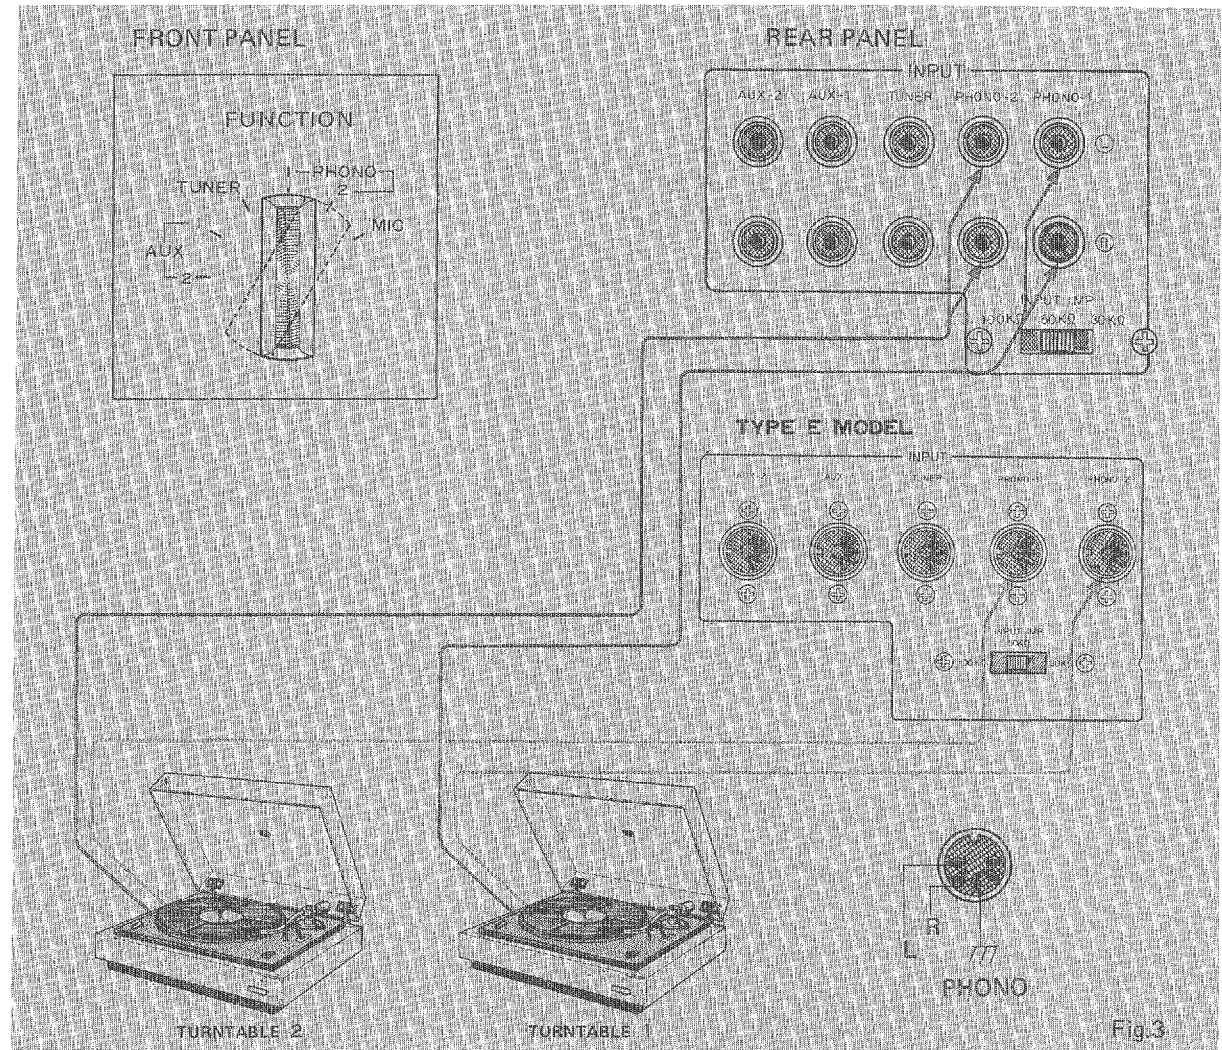


Fig.3

TAPE DECK CONNECTION AND OPERATION

There are two sets of Rec Out and PB jacks, permitting you to connect and use two tape decks at once. This lets you record on both decks at once, as well as dubbing from one deck to the other. Connect the rear panel Tape A Rec Out jacks and the tape deck's Line In jacks. Then connect the deck's Line Out jacks to the CA-600 rear panel Tape A P/B jacks. In both cases be careful not to mix left and right jacks.

If a second deck is used, connect to the Tape B jacks in the same way. See Fig. 4.

TAPE PLAY

Set the tape switch to Play A or Play B, depending upon which set of jacks the tape signal you wish to hear is being fed in from. Then the recorded signal will be heard.

RECORDING

Set the tape switch to Source and the signal being heard will also be fed to the Tape A and B Rec Out jacks for recording. If either or both of these decks are set for recording, the signal will be recorded on the tape. In this way you can record on only one deck, either deck if you have two, or both.

If your deck is a three-head type separate recording and playback heads), the just-recorded signal can be monitored by setting the tape switch for play Play A or Play B (depending on which deck). As long as the deck's controls are left as they are, and the function switch is not touched, the recording will continue while you hear what has been recorded a split-second earlier.

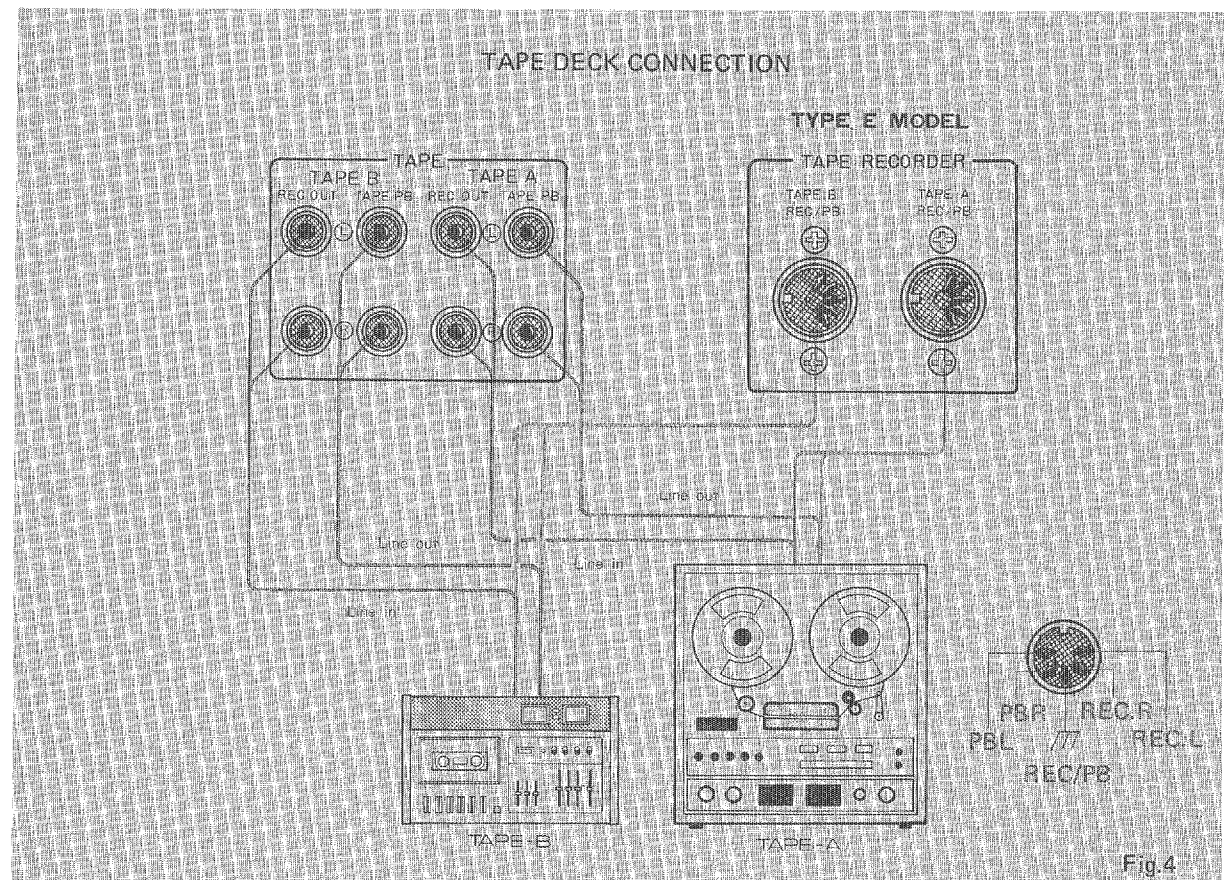



Fig. 4

TAPE DUBBING

When two decks are connected it is possible to record from one to the other via the CA-600. To record from the deck connected to the B jacks to the deck connected to the A jacks, set the first for play, the second for recording. Then set the tape switch to Dub B ▶ A and the signal will pass from the B deck to the A deck. To record in the opposite direction reverse the deck settings and set the tape switch to Dub A ▶ B. See Fig.5.

Note: The function switch setting has no effect here. It does not operate unless the tape switch is set to Source.

Dubbing possible between decks connected to Tape A and Tape B terminals.

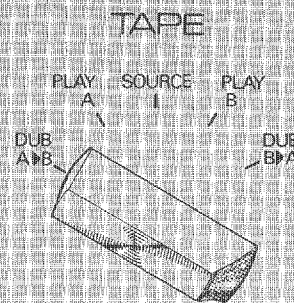

Dubbing can be done in either direction.

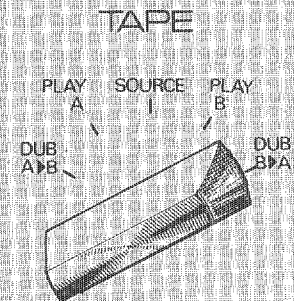


Fig.5

TUNER CONNECTION AND OPERATION

Connect the tuner L and R output cords to the proper jacks on the rear panel (the upper jack is left, the lower right).

When you want to listen to an AM or FM broadcast via the tuner, set the Function switch to Tuner. Tune in the station with the tuning knob on the tuner, then adjust the volume, etc., with the CA-600 controls. See Figs. 6, 8.

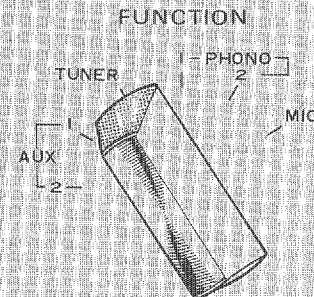




Fig.6

AUX 1/2 CONNECTION AND OPERATION

The Aux 1 and Aux 2 jacks have input sensitivities of 120mV and input impedances of 40k Ω , for direct connection of all signal sources which do not require equalization. Use these jacks to connect two tuners for listening comparison, an eight-track cartridge deck, microphone mixing amp, etc.

To listen to the sound source connected to either of these jacks, set the front panel Function switch to the appropriate setting: Aux 1 or Aux 2 (See Figs. 7 & 8).


Note: To listen to a monophonic input signal, be sure to set the Mode switch to Mono L or R, or Mono L+R.

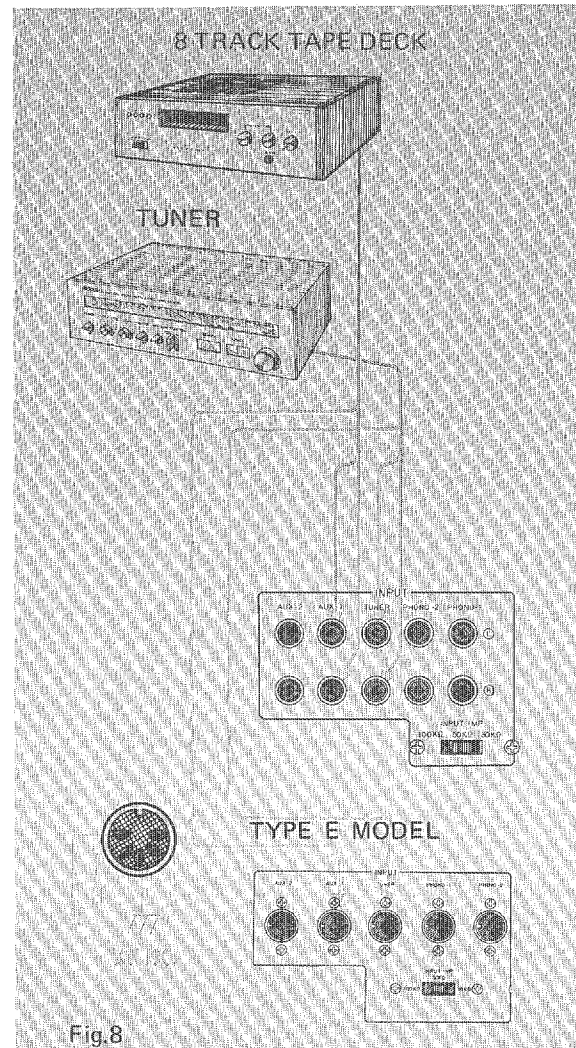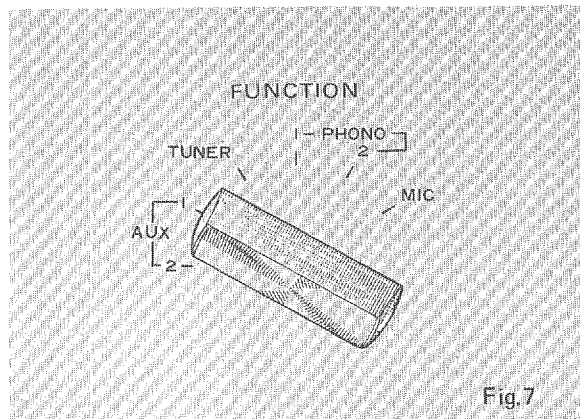

HEADPHONE CONNECTION

For private listening, such as late at night when you do not want to disturb others, plug a pair of stereo headphones into the jack as shown in Fig. 9. Be sure the plug is fully inserted into the jack. Then set the speaker selector switch to OFF. Now you can turn the volume up as loud as you like without any sound coming from the speakers.

There are of course left and right sides to the headphones, so examine them carefully before use.

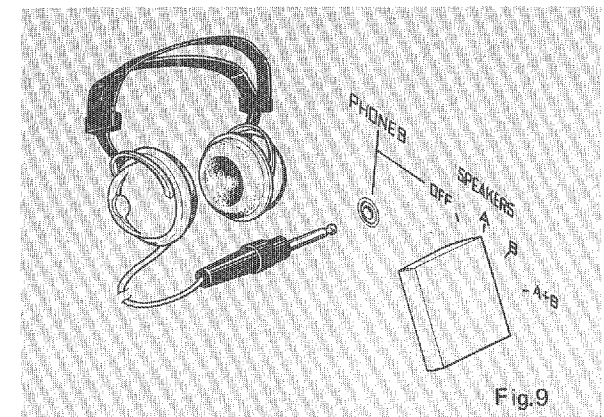

MICROPHONE CONNECTION AND OPERATION

To use a microphone, first plug its cord into the mike jack on the rear panel. Then set the function switch to MIC to speak through the microphone. If the volume is set too high at this time (especially if you are in front of one or more speakers) howling can occur. To use only one microphone, set the Mode switch to Mono L or R, or L+R (See Fig.10). Use a microphone with an impedance between 200Ω and $50k\Omega$. See Fig. 11.

PRE OUT MAIN IN CONNECTION AND OPERATION

On the rear panel are Pre Out and Main In jacks, as well as a Coupler switch which can be set so that the pre-amp and main amp sections of the CA-600 can be used separately. To use the set in the normal situation, with the signal passing directly from the pre-amp to the main amp, set the Coupler switch ON. Then these jacks will be bypassed. If the switch is set OFF the pre-amp signal is not fed to the main amplifier directing it must be fed via the Main In jacks. See Fig.12.

With the coupler switch set to Off and a 4-channel quadralizer or channel divider connected to the Pre Out jacks, a multi-channel or 4-channel system can be obtained.

When a tape recorder is connected to the unit, the input signal can be altered by the tone control circuit before being recorded.

Note: For ordinary operation, be sure to set the coupler switch to On.

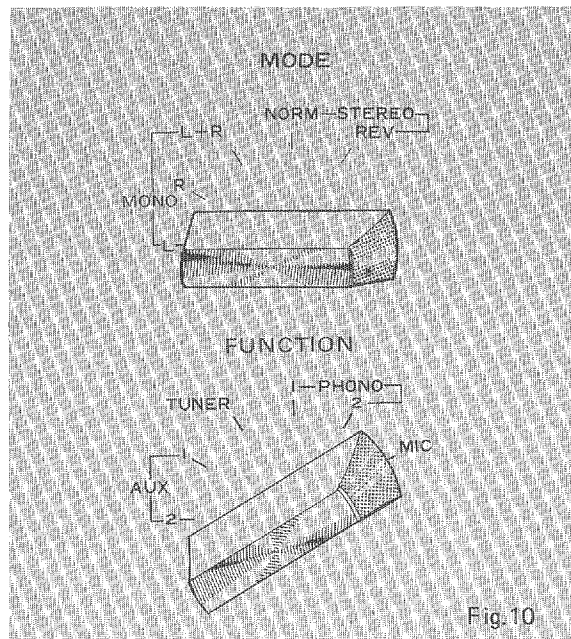


Fig.10

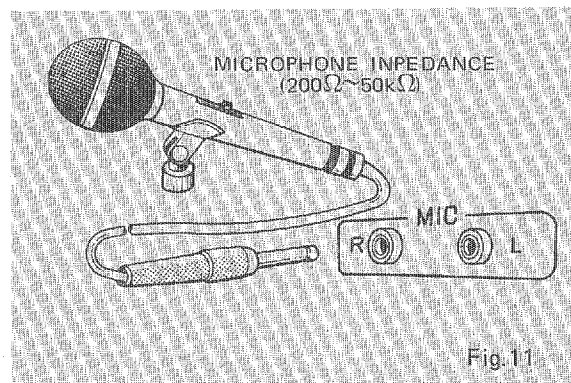


Fig.11


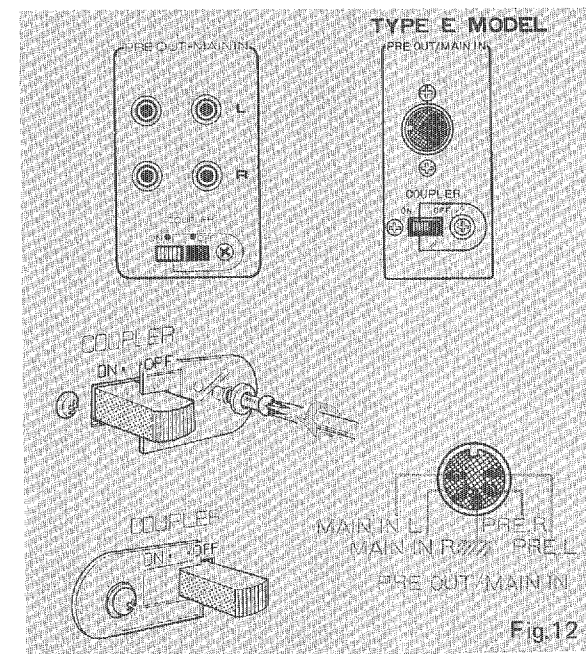



Fig.12

CONNECTION DIAGRAM


• FOR REAR PANEL TYPE A, B, C, D, MODELS

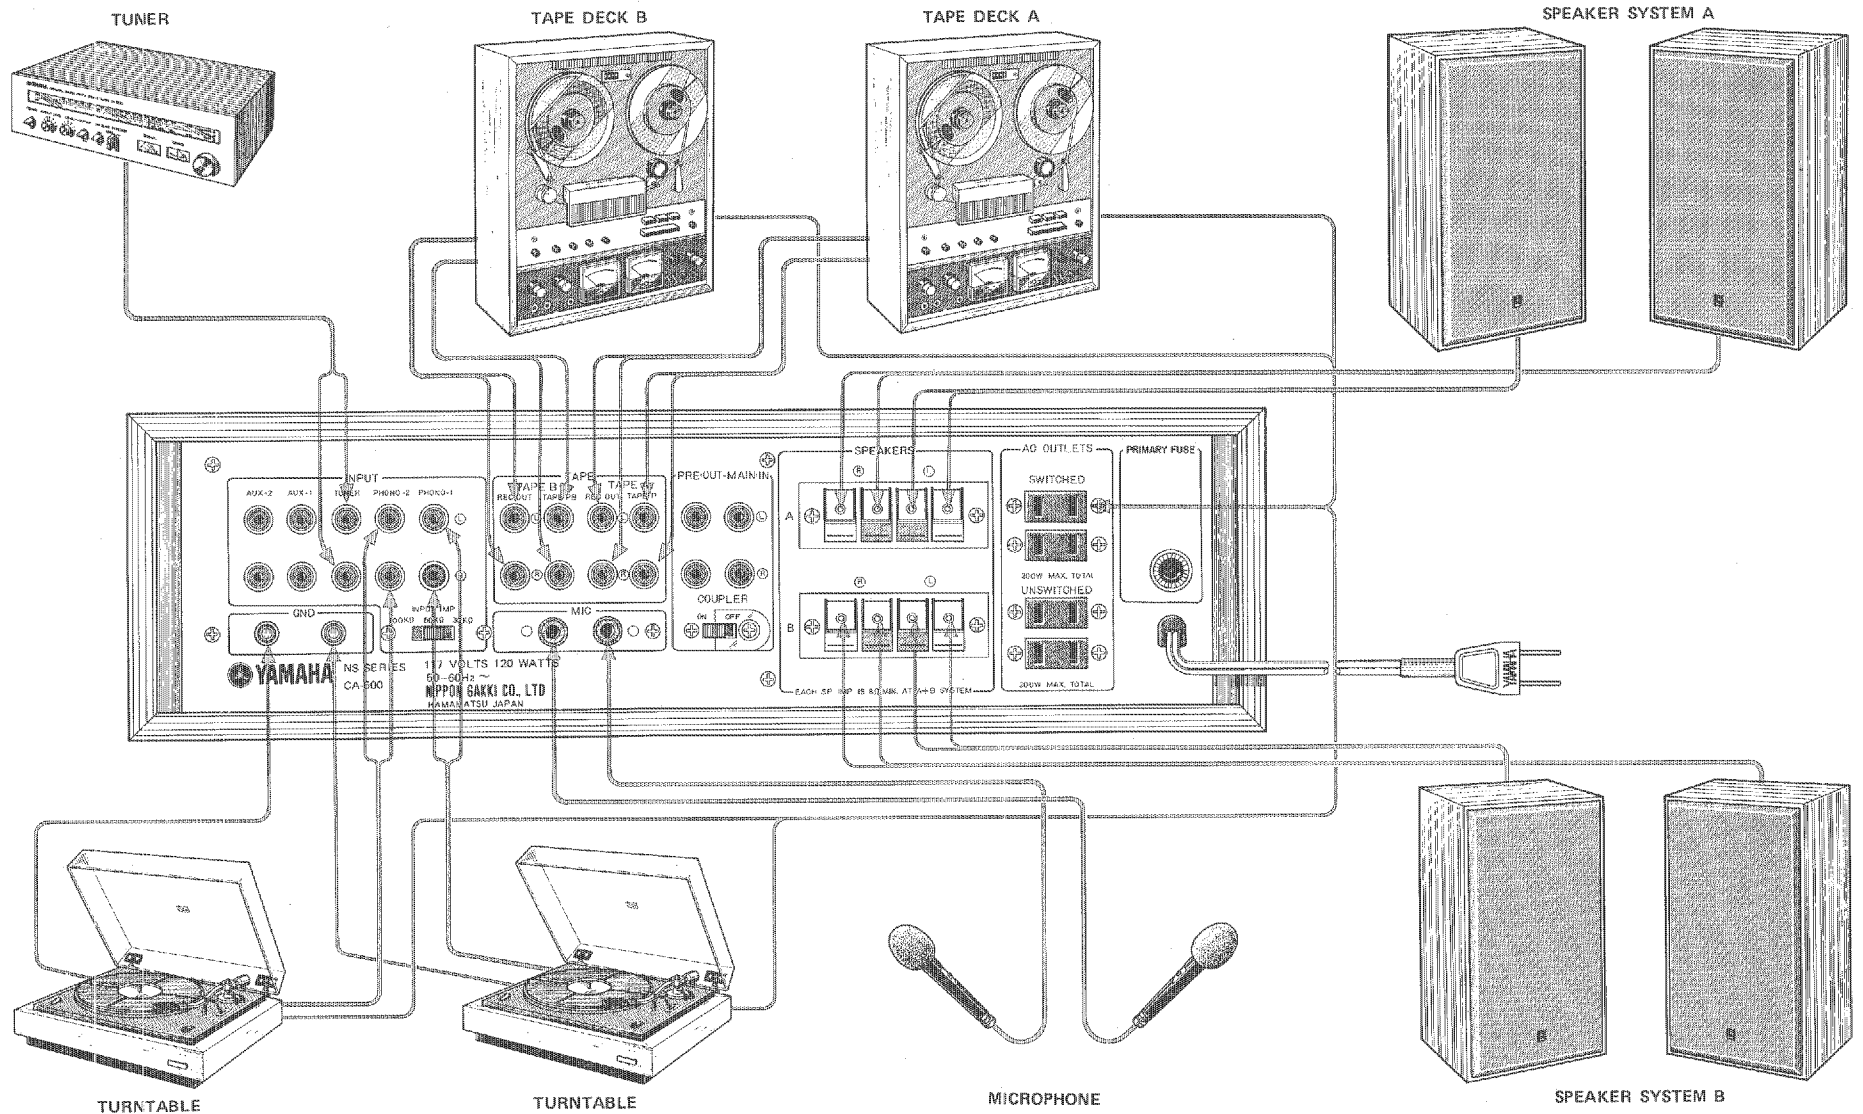

• FOR REAR PANEL TYPE E MODEL

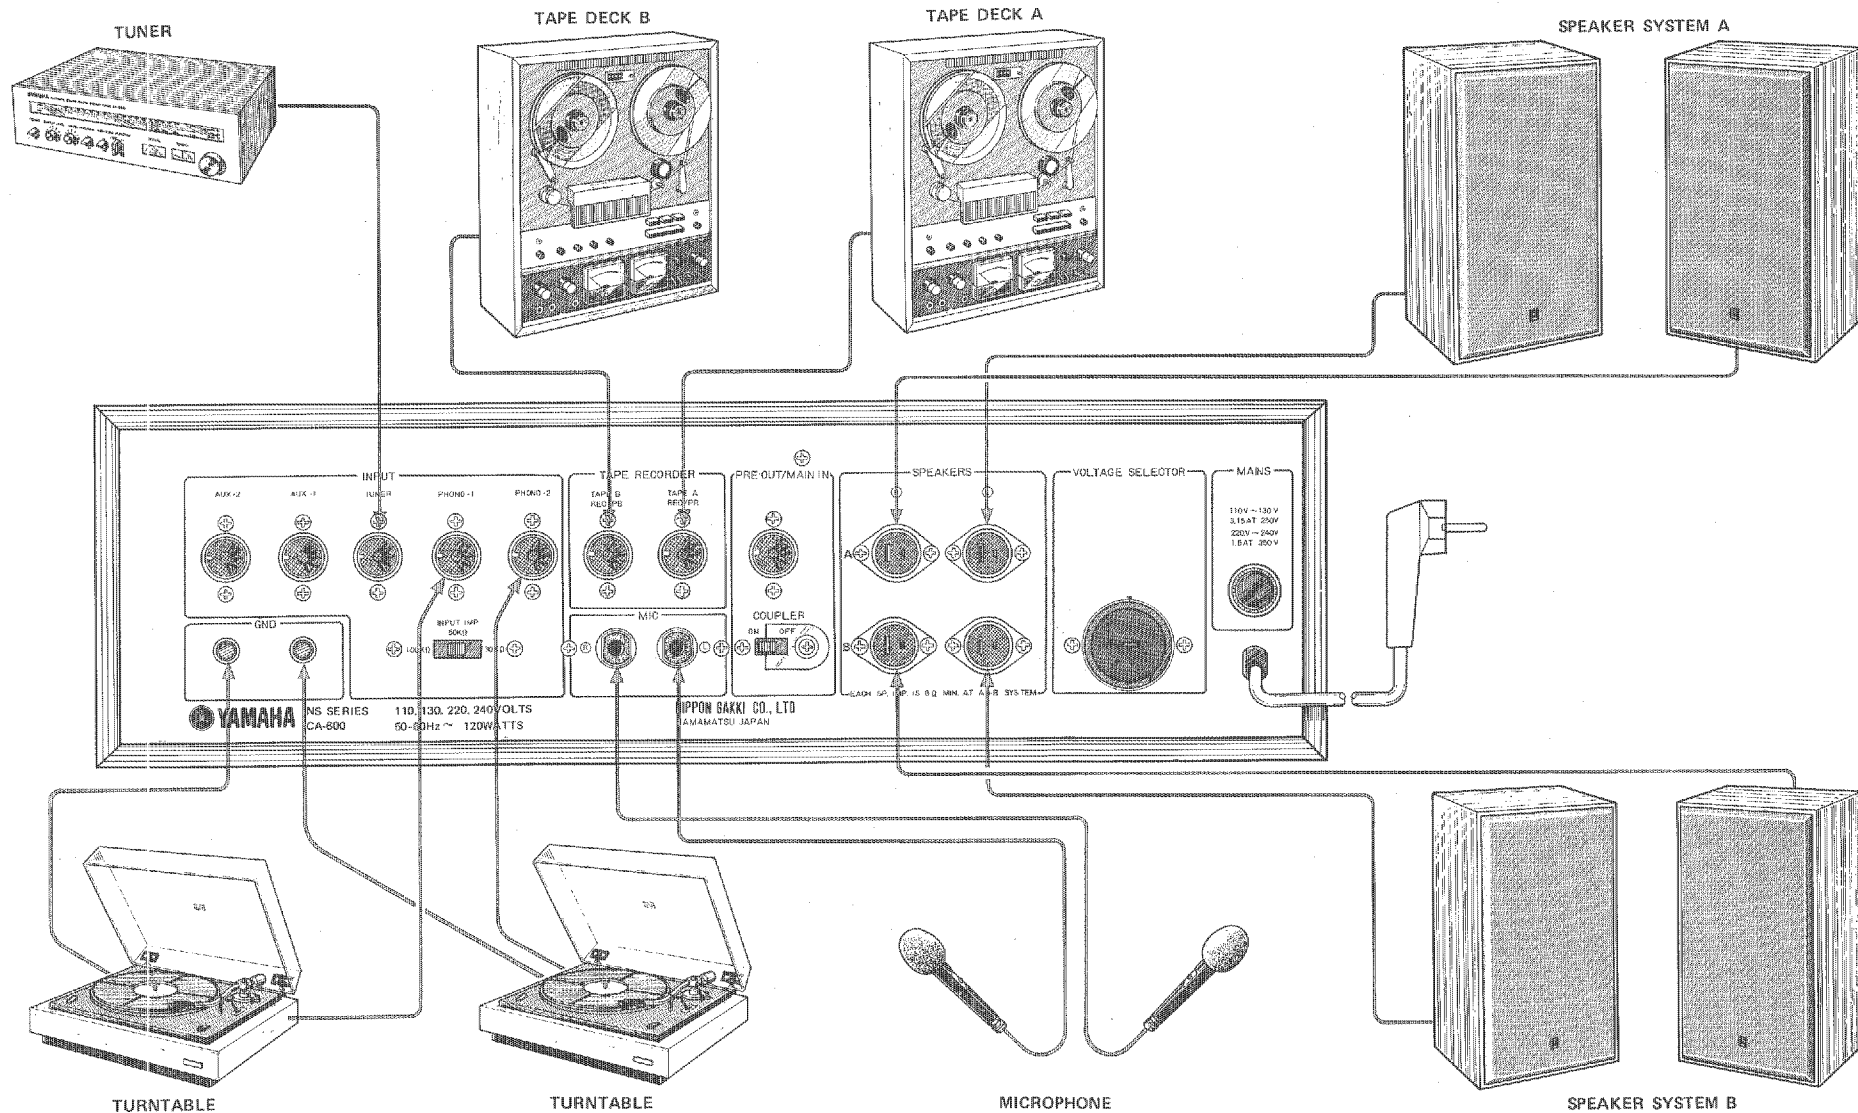

FRONT PANEL PARTS AND FUNCTIONS

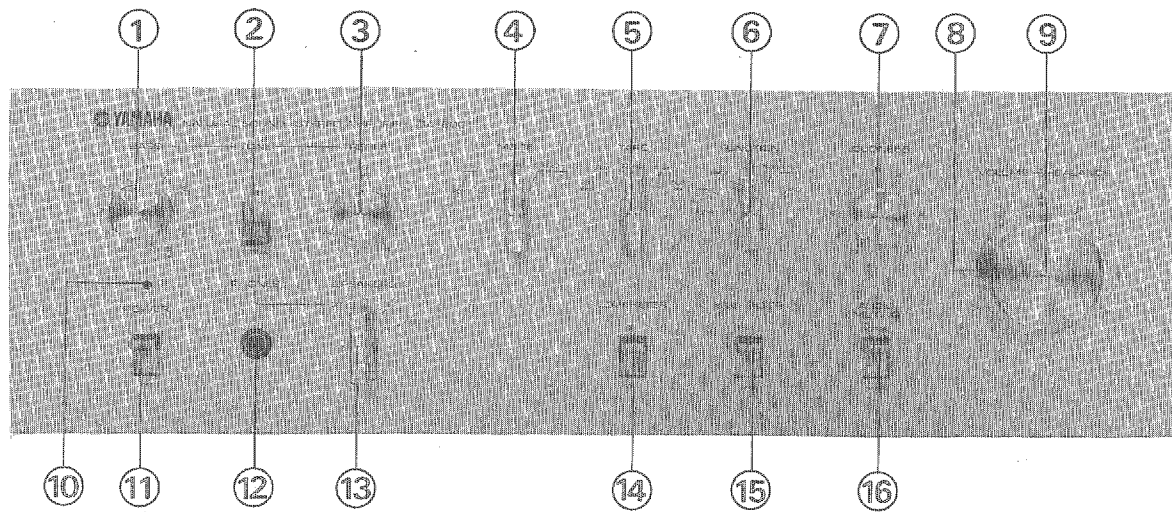

- ① **BASS Control**
Adjusts the bass tones. From the O position turn to the right to strengthen bass tones, turn to the left to diminish them. For normal listening, leave the knob set at O.
- ② **DEFEAT Switch**
Set this switch to the Defeat position to cancel tone control settings, providing flat response. When the switch is set to Normal the tone controls take effect.
- ③ **TREBLE Control**
Adjusts the treble tones. From the O position turn to the right to strengthen treble tones, turn to the left to diminish them. For normal listening, leave the knob set at O (See p. 20).
- ④ **MODE Switch**
This switch is used to select the program source. See p. 20 for details on Mode switch operation.
- ⑤ **TAPE Switch**
This switch lets you monitor the sound from the tape deck(s) connected to the TAPE PB and REC OUT jacks on the rear panel. If two decks are connected, use this switch to dub from one to the other. See p. 6 for details on tape deck connection.
- ⑥ **FUNCTION Switch**
Use this switch to select between program sources from other units connected to the rear panel jacks.

- AUX 1 &
AUX 2: See p. 8 for details on AUX connections and operation.
- TUNER: See p. 7 for tuner connection and operation details.
- PHONO 1
& 2: See p. 5 for record player connection and operation details.
- MIC: See p. 9 for microphone connection and use.


- ⑦ **LOUDNESS Control**
This knob provides continuous loudness control. See p. 19 for loudness control details.
- ⑧ **BALANCE Control**
Controls the relative volume from the left and right speakers. Turning to the right makes the left channel speaker sound weaker, turning to the left does the same to the right speaker. At the center position (the dot) both speakers are evenly balanced.
Match the balance control to your room acoustics by first setting for a monaural signal, then adjusting so that the sound seems to originate from a point midway between the speakers.
- ⑨ **VOLUME Control**
Controls the overall volume. Turn to the right to increase volume.
- ⑩ **POWER Lamp**
Tells you when the unit is plugged in and

switched on.

- ⑪ **POWER Switch**
Power the amplifier when switched on.
- ⑫ **PHONES Jack**
Connect a stereo headphone set here. See p. 8 for details on headphone use.
- ⑬ **SPEAKERS (Speaker Selector Switch)**
This switch lets you power any of the up to three speaker sets connected to the rear panel terminals. See p. 4 for speaker connection and selection details.
- ⑭ **LOW Filter Switch**
Cuts all noise, such as turntable rumble, below 50Hz.
- ⑮ **HIGH Filter Switch**
Cuts all noise, such as FM hiss or noise from defective records, above 8kHz.
Note: When the filter operation is not required, the filter switches should be set to Off.
- ⑯ **AUDIO MUTING Switch**
With this switch set at its -20dB position the amplifier gain (i.e., the total volume) is reduced by 20dB (to 1/10) with no need to adjust the VOLUME control. See p. 20 for details.

REAR PANEL PARTS AND FUNCTIONS

• TYPE A MODEL

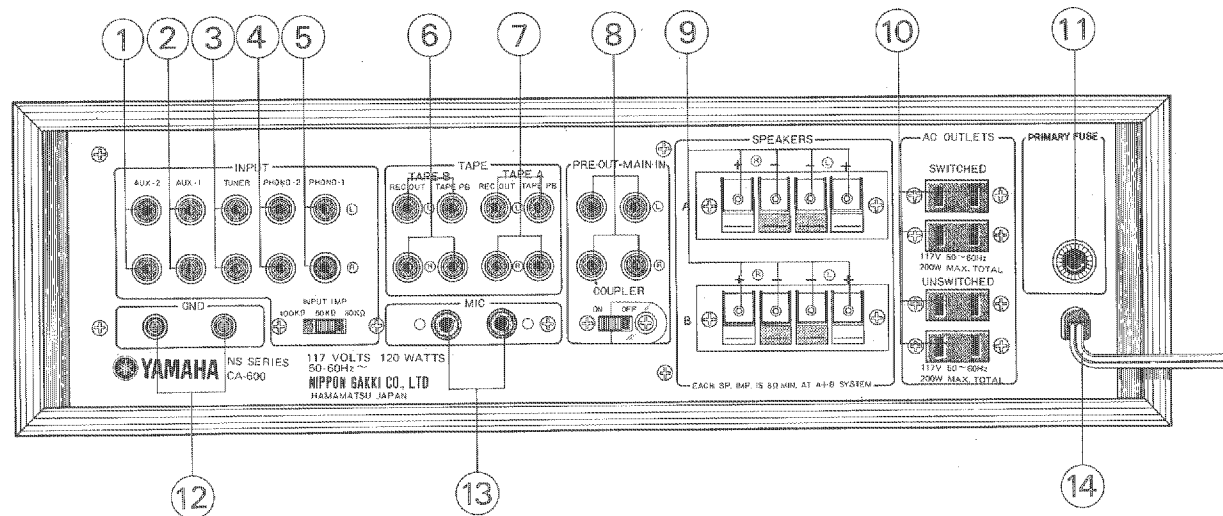


- ① AUX 2 Jacks
- ② AUX 1 Jacks
See p. 8 for connection and function of auxiliary inputs.
- ③ TUNER Jacks See p. 8 for details.
- ④ PHONO 2 Jacks
- ⑤ PHONO 1 Jacks/INPUT IMP Switch See p. 5 for details.
- ⑥ TAPE B See p. 6 for details.
REC OUT Jacks
TAPE PB Jacks
- ⑦ TAPE A See p. 6 for details.
REC OUT Jacks
TAPE PB Jacks

- ⑧ PRE OUT-MAIN IN See p. 9 for details.
PRE OUT Jacks
MAIN IN Jacks
COUPLER Switch
- ⑨ SPEAKERS A B Terminals See p. 4 for details.
- ⑩ AC OUTLETS
SWITCHED: Power to this outlet depends upon the position of the Power switch on the front panel. If that switch is off, so is this outlet. Maximum power supply: 200W.

- ⑪ PRIMARY FUSE
Protects the amplifier circuitry. When replacing, be sure to use a fuse of the same rating.
- ⑫ GND (Ground) Terminal
- ⑬ MIC (Microphone) Jack See p. 9 for details.
- ⑭ Power Supply Cord

UNSWITCHED: Independent of the front panel Power switch. Power is supplied to this outlet as long as the CA-600 power cord is plugged in. Maximum power supply: 200W.

• TYPE B MODEL

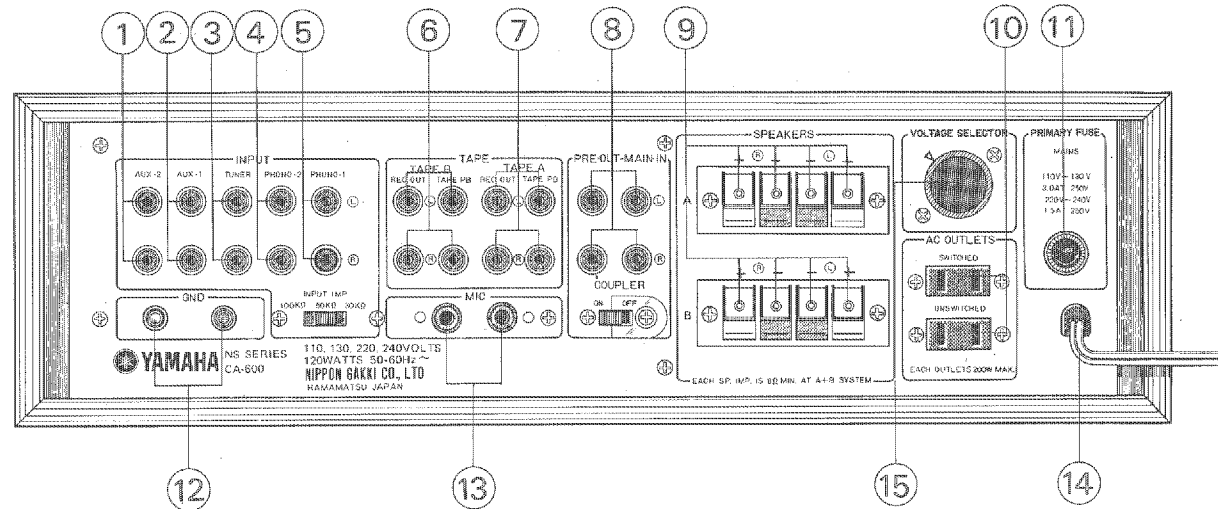


- ① AUX 2 Jacks
- ② AUX 1 Jacks
See p. 8 for connection and function of auxiliary inputs.
- ③ TUNER Jacks See p. 8 for details.
- ④ PHONO 2 Jacks
- ⑤ PHONO 1 Jacks/INPUT IMP Switch See p. 5 for details.
- ⑥ TAPE B See p. 6 for details.
REC OUT Jacks
TAPE PB Jacks
- ⑦ TAPE A See p. 6 for details.
REC OUT Jacks
TAPE PB Jacks

- ⑧ PRE OUT-MAIN IN See p. 9 for details.
PRE OUT Jacks
MAIN IN Jacks
COUPLER Switch
- ⑨ SPEAKERS A B Terminals See p. 4 for details.
- ⑩ AC OUTLETS
SWITCHED: Power to this outlet depends upon the position of the POWER switch on the front panel. If that switch is off, so is this outlet. Maximum power supply: 200W.

UNSWITCHED: Independent of the front panel POWER switch.
Power is supplied to this outlet as long as the CA-600 power cord is plugged in. Maximum power supply: 200W.

- ⑪ PRIMARY FUSE
Protects the amplifier circuitry.
When replacing, be sure to use a fuse of the same rating.
- ⑫ GND (Ground) Terminal
- ⑬ MIC (Microphone) Jack See p. 9 for details.
- ⑭ Power Supply Cord
- ⑮ VOLTAGE SELECTOR

• TYPE C MODEL

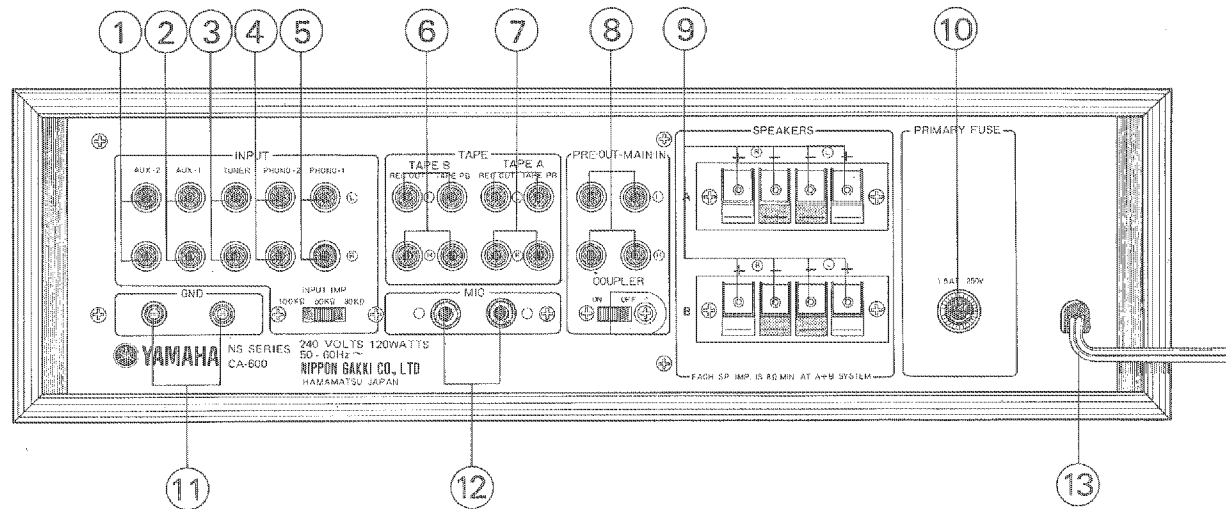


- ① AUX 2 Jacks
- ② AUX 1 Jacks
See p. 8 for connection and function of auxiliary inputs.
- ③ TUNER Jacks See p. 8 for details.
- ④ PHONO 2 Jacks
- ⑤ PHONO 1 Jacks/INPUT IMP Switch See p. 5 for details.
- ⑥ TAPE B See p. 6 for details.

- REC OUT Jacks
- TAPE PB Jacks
- ⑦ TAPE A See p. 6 for details.
- REC OUT Jacks
- TAPE PB Jacks
- ⑧ PRE OUT-MAIN IN See p. 9 for details.
- PRE OUT Jacks
- MAIN IN Jacks
- COUPLER Switch

- ⑨ SPEAKERS A B Terminals See p. 4 for details.
- ⑩ PRIMARY FUSE
Protects the amplifier circuitry.
When replacing, be sure to use a fuse of the same rating.
- ⑪ GND (Ground) Terminal
- ⑫ MIC (Microphone) Jack See p. 9 for details.
- ⑬ Power Supply Cord

• TYPE D MODEL

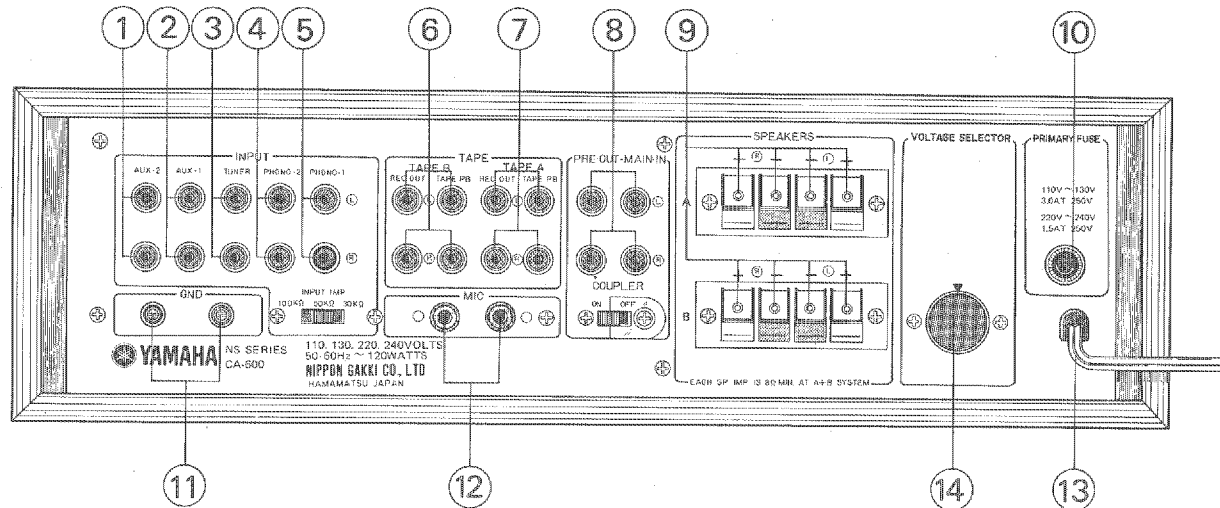


- ① AUX 2 Jacks
- ② AUX 1 Jacks
See p. 8 for connection and function of auxiliary inputs.
- ③ TUNER Jacks See p. 8 for details.
- ④ PHONO 2 Jacks
- ⑤ PHONO 1 Jacks/INPUT IMP Switch See p. 5 for details.
- ⑥ TAPE B See p. 6 for details.
REC OUT Jacks

- ⑦ TAPE PB Jacks
- ⑦ TAPE A See p. 6 for details.
REC OUT Jacks
TAPE PB Jacks
- ⑧ PRE OUT-MAIN IN See p. 9 for details.
PRE OUT Jacks
MAIN IN Jacks
COUPLER Switch
- ⑨ SPEAKERS A B Terminals See p. 4 for details.

- ⑩ PRIMARY FUSE
Protects the amplifier circuitry.
When replacing, be sure to use a fuse of the same rating.
- ⑪ GND (Ground) Terminal
- ⑫ MIC (Microphone) Jack See p. 9 for details.
- ⑬ Power Supply Cord
- ⑭ VOLTAGE SELECTOR

• TYPE E MODEL

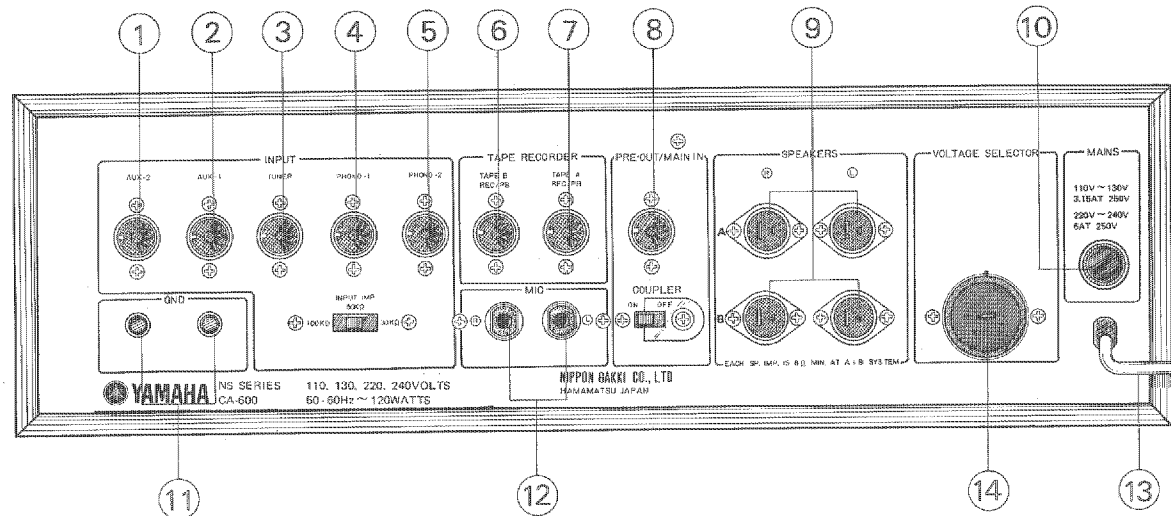

- ① **AUX 2 Connector**
- ② **AUX 1 Connector**
See p. 8 for connection and function of auxiliary inputs.
- ③ **TUNER Connector** See p. 7 for details.
- ④ **PHONO 1 Connector/INPUT IMP Switch** See p.5 for details.
- ⑤ **PHONO 2 Connector**

- ⑥ **TAPE B** See p. 6 for details.
REC OUT Connector
TAPE PB Connector
- ⑦ **TAPE A** See p. 6 for details.
REC OUT Connector
TAPE PB Connector
- ⑧ **PRE OUT-MAIN IN** See p. 9 for details.
PRE OUT Connector
MAIN IN Connector
COUPLER Switch


- ⑨ **SPEAKERS A B Terminals** See p. 4 for details.
- ⑩ **PRIMARY FUSE**
Protects the amplifier circuitry.
When replacing, be sure to use a fuse of the same rating.
- ⑪ **GND (Ground) Terminal**
- ⑫ **MIC (Microphone) Jack** See p. 9 for details.
- ⑬ **Power Supply Cord**
- ⑭ **VOLTAGE SELECTOR**

CONTROLS

LOUDNESS CONTROL

The ear's sensitivity to extreme high and low sounds is noticeably reduced at low volume levels. The loudness control has been included to compensate for this fact. With conventional loudness controls, once the control is switched on it works mechanically in conjunction with the volume control setting angle. But such a system does not take into consideration the varying efficiency of speaker systems, and can thus give rise to unnatural frequency response. In order to match the actual volume level and other characteristics of the speakers and room acoustics a solution was found during the CA-600 design stages. It consists of a continuous loudness control which can be precisely adjusted for a response curve that sounds most natural according to the actual sound heard, not that passing through the output jacks.

Set the control to Flat and it has absolutely no effect. Then raise the volume to the highest level you expect to use. Now, whenever you turn the loudness control to the left the volume will be reduced at the same time, letting you match the sound to the room acoustics and your own listening preferences.

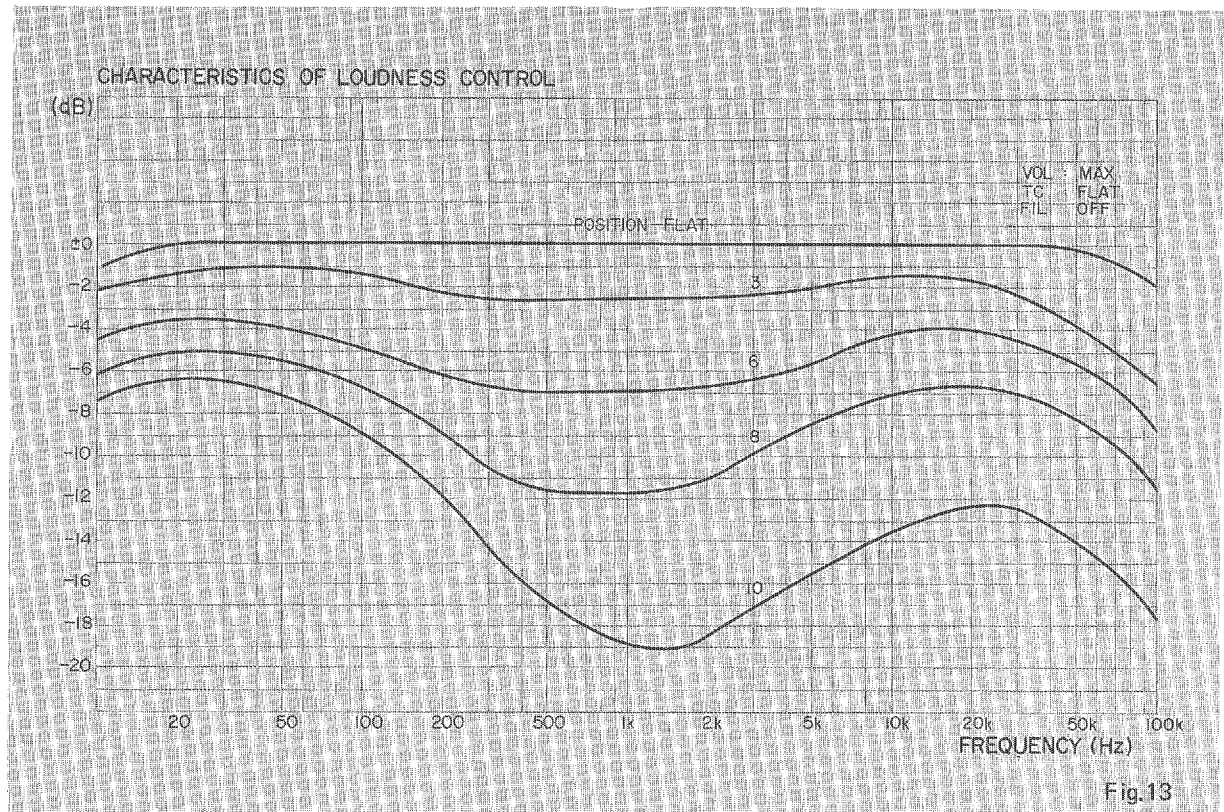

MUTING SWITCH

This switch permits instant reductions in volume level without touching and then later readjusting the volume control. When flicked to its -20dB position the pre-amp gain is reduced 20dB ($1/10$) the original level. This is ideal for temporary volume reductions, such as a telephone call in the middle of a record, etc.

If you listen at the -20dB level and then raise the volume, returning the switch to Normal may result in an excessive surge of power which can damage your speakers. For this reason, once the muting switch is used, be sure to return it to the Normal position for regular-volume listening.

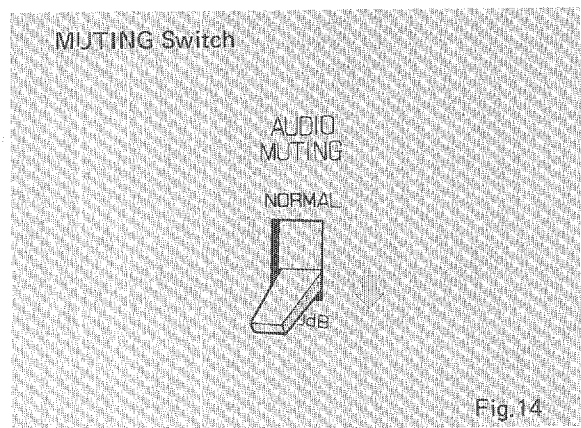


Fig. 14

MODE SWITCH

This switch is used to select the way you wish to divide or combine the various parts of the source signal selected by the function switch. When the switch is set to Mono L or Mono R, it will pick only the signal coming in through the left or right jack for that particular program, then pass that signal through both left and right output channels (speakers, headphones, Pre Out). This setting is useful when listening to a monophonic radio, tape or TV sound signal.

When the switch is set to Mono L+R both left and right sound source signals are first mixed, then the mixed signal is fed to both output channels. This is the best position when playing a monophonic record.

For stereo signals, set to Stereo Norm. Then the left and right sound source signals are kept separated all the way through the system to the output, with each side heard through the proper speaker, etc.

The stereo signals are separated in the same way when the switch is set to REV, except that in this case the left signals are fed to the right output jacks the right signals to the left.

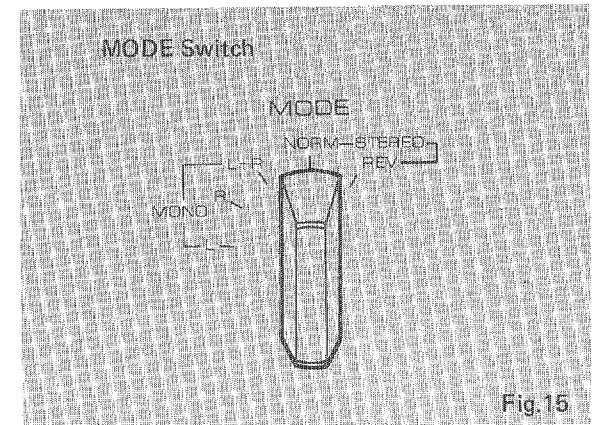


Fig. 15

TONE CONTROLS

These controls work with special circuits to allow you to match the tonal response to suit the acoustics of your listening room and your listening tastes.

There is a special control for low tones, and one for highs. When the tone controls are set to 0 they provide flat response. Turning either control to the right accentuates that tonal range, turning to the left diminishes it. Setting the Defeat switch to the Defeat position cuts out the tone control circuits to provide flat response regardless of tone control settings.

Bass and Treble Turnover and Defeat Switches

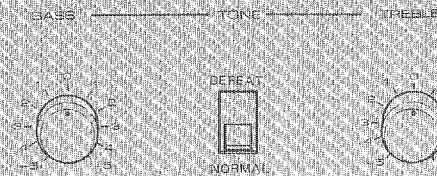


Fig.16

BALANCE ADJUSTMENT

The knob on the outside of the volume control is to adjust the left-right balance. For normal listening it should be set to the mid-point, indicated by the dot. If the sound is for some reason unbalanced, use this knob to adjust. The sound will become stronger in the direction in which the knob is turned. This control is mainly to correct balance problems originating in the sound source.

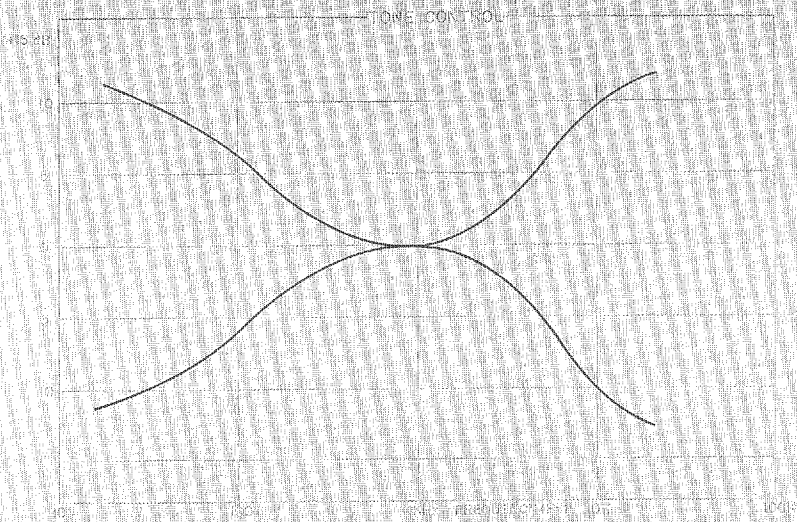


Fig.17

BALANCE Adjustment (out section)

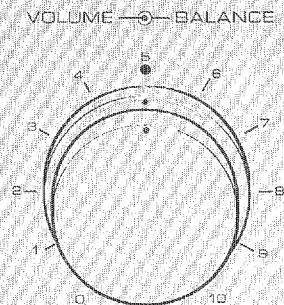


Fig.18

LOW & HIGH FILTERS

Use the filters to cut out annoying noise or interference in the low or high tone ranges.

For high noise, such as that caused by scratched records, switch on the High filter and all frequencies above 8kHz will be cut.

For low noise, such as turntable hum, etc., the Low filter will cut all sounds below 50Hz.

In normal listening conditions, when noise in that sound range is not a problem, the filter should be switched Off.

LOW & HIGH FILTERS

LOW FILTER

HIGH FILTER



Fig.19

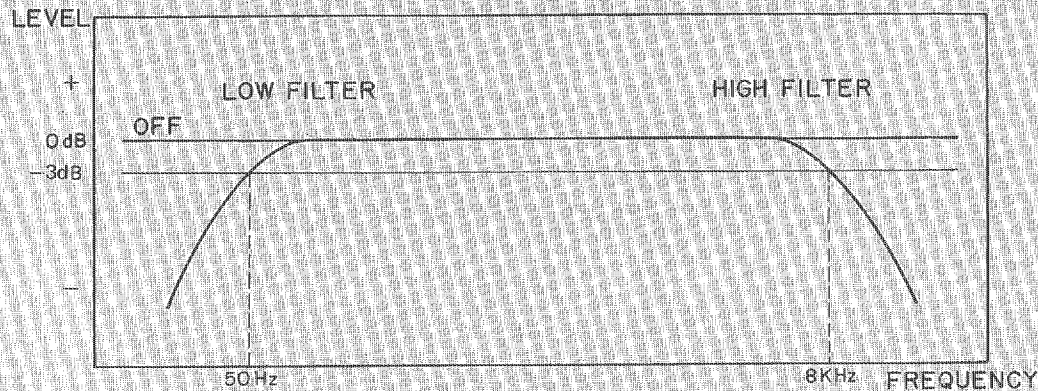


Fig.20

ACCESSORIES

Pads:

Use the pads when another amp, record player, etc. is placed on top of the CA-600. They protect the upper surface from scratches. To use, remove the paper from each pad and stick it to the bottom of the other unit's foot rest.

Wrench:

This hexagonal wrench is used to adjust the function and speaker selector settings if they are not lined up with the indications.

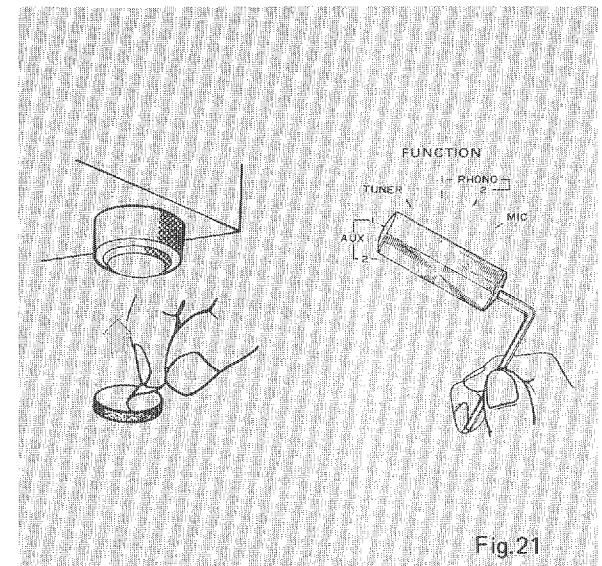


Fig.21

TROUBLESHOOTING

Trouble	Cause	Correction
No power when switch set on.	Cord not sufficiently plugged into socket.	Plug in firmly.
	Blown power fuse.	Replace.
Connections complete, but no sound regardless of Function switch setting.	The Pre Out/Main In Coupler switch is off.	Switch it on.
	Tape switch not set to Source.	Reset.
No sound from one or both speakers.	Faulty speaker cord connection.	Reconnect firmly.
	Speaker switch off.	Switch on for that speaker system.
	Balance control improperly set.	Readjust for proper setting.
Sound suddenly stops during performance.	The speaker protection circuits cut off because a potential of more than $\pm 2V$ DC is generated.	When the potential returns to 0V the relay circuit will switch on again.
		Switch OFF, after a while ON.
	Power fuse blown.	Replace.
Poor bass response or audio image.	Speakers out of phase.	Recheck(+) and (-) connections of each speaker.
Insufficient volume, even with control turned up.	Audio Muting switch set to -20dB position.	First turn volume control down, then set Audio Muting switch to Normal.
High and low tones unnaturally loud.	Volume turned up with Loudness control left on.	When adjusting the volume, first set the loudness switch for flat response, then adjust the volume control for the loudest level you expect to use. Now the volume can be controlled with the loudness control.
		When no loudness effect is desired in a high-volume situation, turn the control to its flat response position.
Hum or booming during record play.	Faulty pin plug-shielded cord connection.	Replace cord.
	Player not grounded.	Connect player ground lead to GND terminal on CA-600 rear panel. Disconnect if no improvement noted.
Interference from nearby amateur radio transmitter (especially during Phono operation).	Too close to transmitter.	Contact the amateur operator and have him take counter measures with his transmitter.
		Contact your nearest governmental regulation agency.
Sudden sound surging when volume raised during record play.	This is howling, caused by having the record player too close to the speakers, or by an unstable player location.	Rearrange the player and speakers.
Variation in volumes between FM/AM broadcasts, records and tape playback.	Output of connected tuner, player, deck, etc. differs.	Reset each time function lever switched, using volume control.

SPECIFICATIONS

● AUDIO SECTION

POWER OUTPUT

Dynamic Power (IHF)	130 watts (4 Ω) 90 watts (8 Ω)
Continuous RMS Power	(each channel driven) 45/45 watts (4 Ω) at 1,000Hz 35/35 watts (8 Ω) at 1,000Hz
Continuous RMS Power	(both channels driven) 40+40 watts (4 Ω) at 1,000Hz 32+32 watts (8 Ω) at 1,000Hz
Continuous RMS Power	(both channels driven) 35+35 watts (4 Ω) at 20 to 20,000Hz 30+30 watts (8 Ω) at 20 to 20,000Hz

TOTAL HARMONIC DISTORTION

Power Amplifier Only	less than 0.1% at rated power less than 0.04% at 1 watt
Preamplifier Only (PHONO to PRE OUT)	less than 0.1% at rated power (AUX to PRE OUT) less than 0.02% at rated power
Overall (AUX to Power Output)	less than 0.1% at rated power

INTERMODULATION DISTORTION

	(70Hz:7,000Hz=4:1 SMPTE method)
Power Amplifier Only	less than 0.1% (8 Ω) at rated power less than 0.05% (8 Ω) at 1 watt
Overall (AUX to Power Output)	less than 0.1% (8 Ω) at rated output

POWER BANDWIDTH (IHF, distortion 0.5% const.)

5 to 70,000Hz

FREQUENCY RESPONSE (at 1 watt)

Overall (TUNER, AUX, TAPE PB to Power Output)	10 to 50,000Hz+0.5dB, -1dB
Overall (MIC to Power Output)	20 to 20,000Hz+0.5dB, -2dB
Power Amplifier Only	10 to 100,000Hz +0dB, -1dB
Deviation from RIAA (30 to 15,000Hz)	+0.2dB, -0.2dB

LOAD IMPEDANCE

4 to 16 Ω

DAMPING FACTOR (8 Ω)

70 at 1,000Hz

CHANNEL SEPARATION (at rated power, 1,000Hz)

Power Amplifier Only better than 60dB

Overall from PHONO 1, 2 better than 50dB

Overall from Tuner, AUX, TAPE PB

better than 50dB

Overall from MIC better than 50dB

HUM AND NOISE (IHF, Closed Circuit A Network)

Overall from PHONO 1, 2 better than 80dB

Overall from MIC better than 70dB

Overall from Tuner, AUX TAPE PB

better than 90dB

Power Amplifier Only better than 100dB

Volume at Minimum better than 90dB

INPUT SENSITIVITY AND IMPEDANCE

(at rated power, 1,000Hz)


● GENERAL

PHONO 1	3mV (30k Ω , 50k Ω , 100k Ω)
PHONO 2	3mV (50k Ω)
PHONO 1, 2 Max. Input Capability	310mV (T.H.D. 0.1%)
MIC	2.5mV (50k Ω)
MIC Max. Input Capability	245mV (T.H.D. 0.1%)
TUNER, AUX 1, 2	120mV (40k Ω)
TAPE PB A, B	120mV (40k Ω)
Power Amplifier Input	775mV (40k Ω)
OUTPUT LEVEL AND IMPEDANCE	(at rated power, 1,000Hz)
TAPE REC OUT A, B	120mV (2k Ω)
PRE OUT	775mV (2k Ω)
	3,000mV (Max. Output T.H.D. 0.1%)
TONE CONTROLS	
BASS	+10dB, -10dB at 50Hz
TREBLE	+10dB, -10dB at 10,000Hz
FILTERS	
LOW	-3dB at 50Hz, (12dB/oct.)
HIGH	-3dB at 8,000Hz (6dB/oct.)
LOUDNESS CONTROL (Continuous Loudness Volume at Minimum)	+10dB at 100Hz, +5dB at 10,000Hz

Semiconductors	39 Transistors; 6 Diodes; 6 Zener Diodes
Power Source	AC 110, 117, 130, 220, 240V, 50/60Hz
Power Consumption	
Max.	200 watts
Rated	115 watts
AC Outlets	
Switched	2 (total 200 watts)
Unswitched	2 (total 200 watts)
Dimensions	436mm (17 $\frac{1}{4}$ "W x 144mm (5 $\frac{3}{4}$ "H x 323mm (12 $\frac{3}{4}$ "D)
Weight	11.5kg (25.4lbs.)

Design and specifications subject to change without notice.

BLOCK DIAGRAM

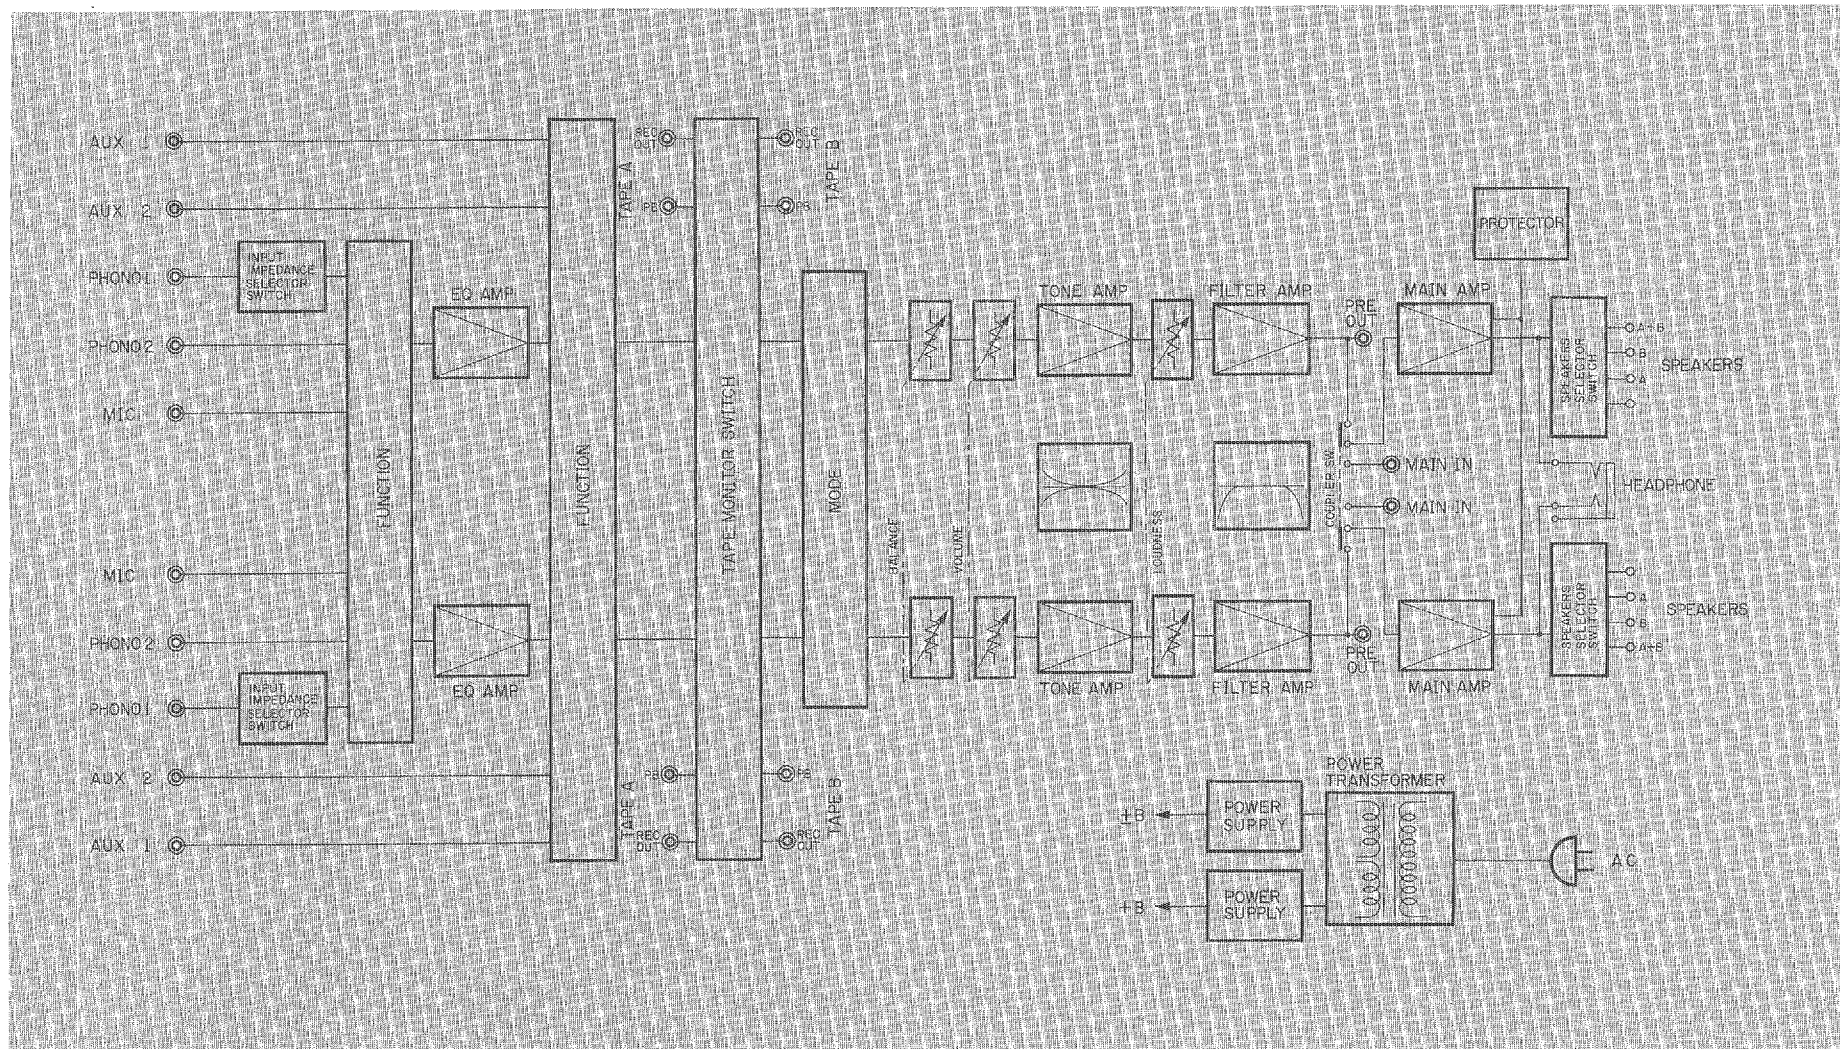

SINCE 1887



YAMAHA

NIPPON GAKKI CO.,LTD. HAMAMATSU, JAPAN